




ROVECONCEPTS

Refined Luxury Living

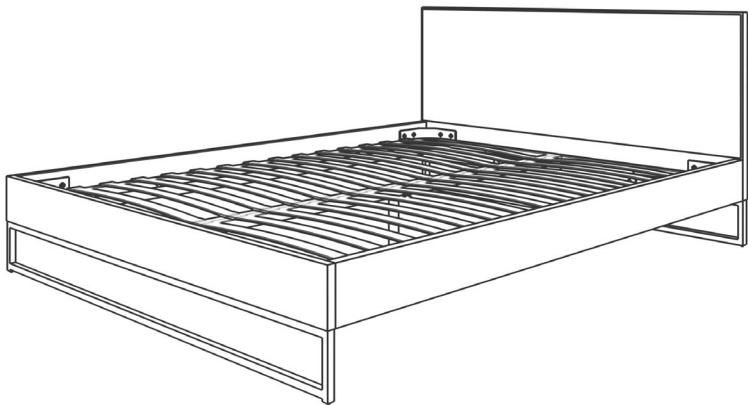


**SOREN BED
ASSEMBLY INSTRUCTIONS**


HARDWARE

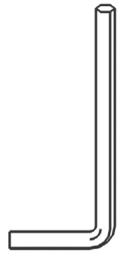**A**x4
M8*80**B**x4
M8*90**C**x34
M8*20**D**x4
M8*30**E**x4
M8*60**F**x42
ø17*ø8*1**G**x10
M8**H**x1
M5**I**


x8

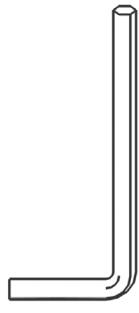**J**x1
M6**K**x1
14M


STEP 1

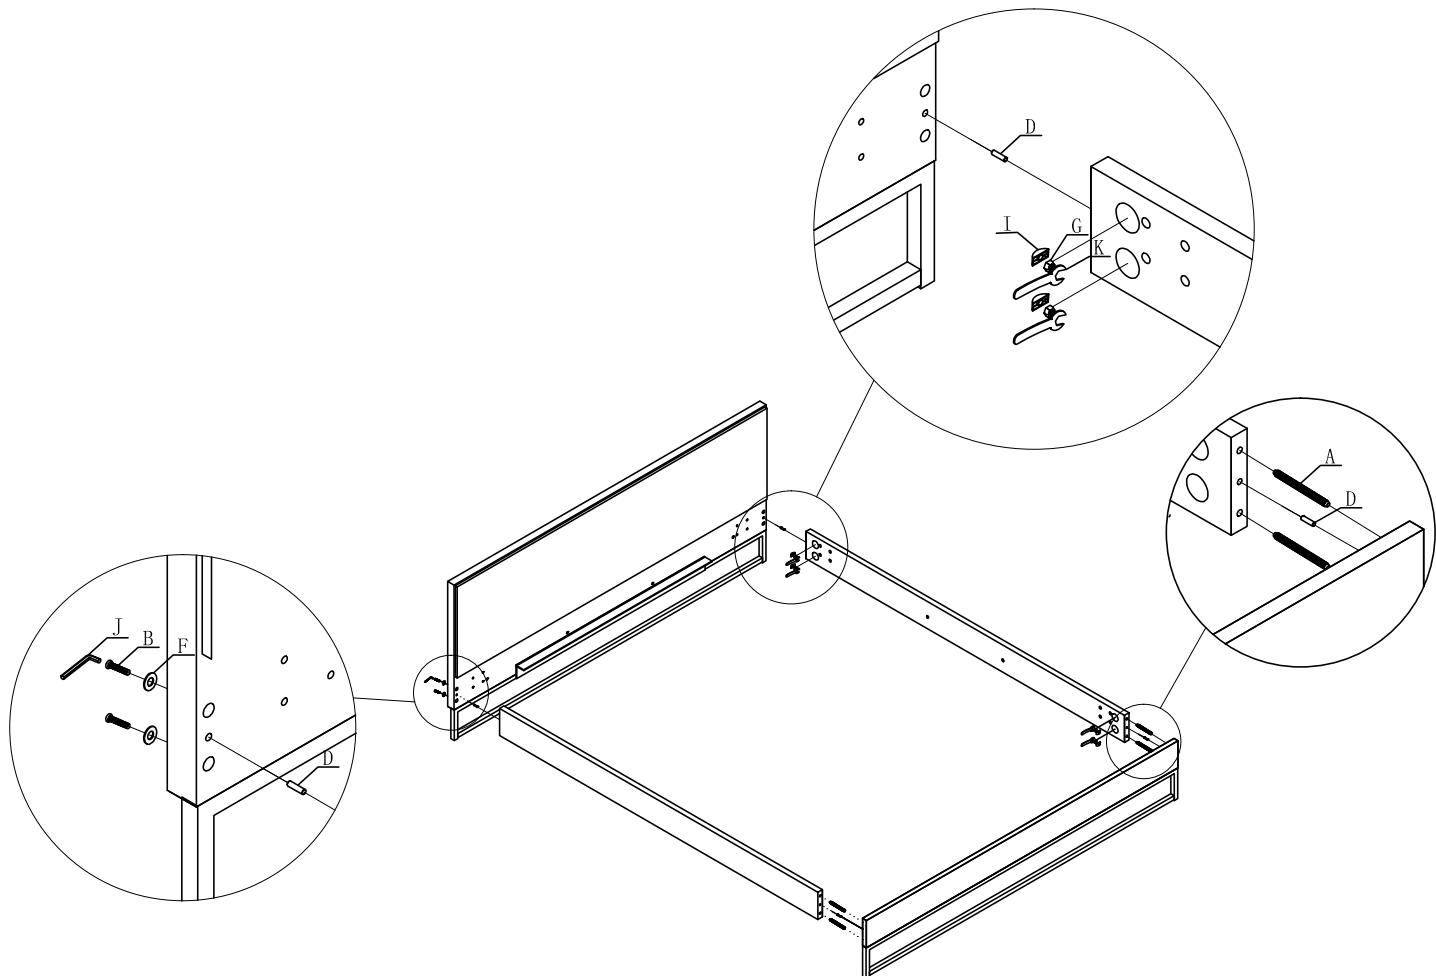


STEP 2

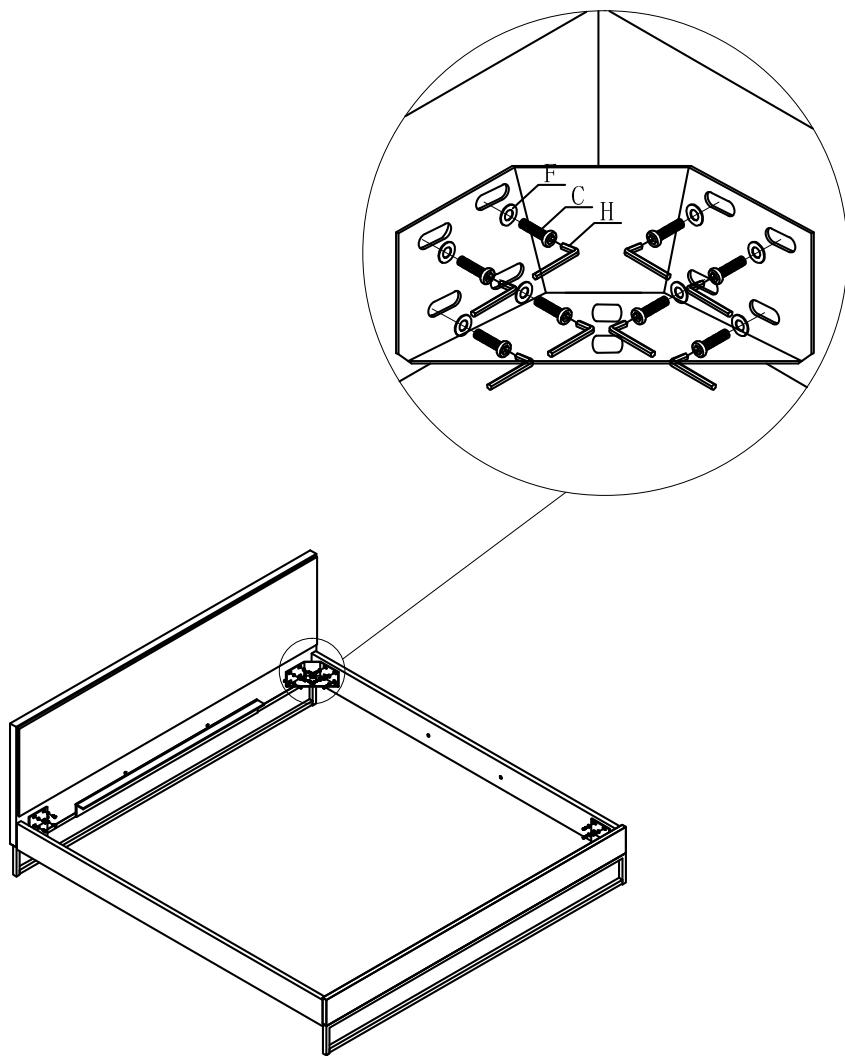

STEP 3

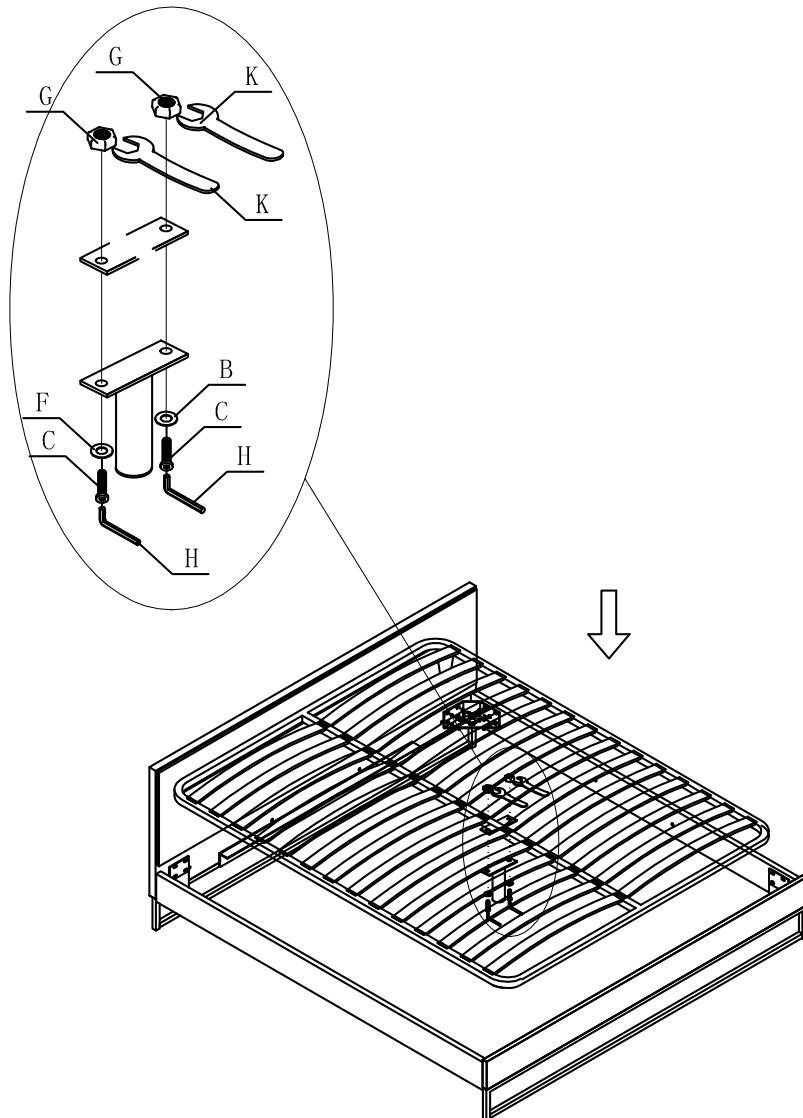

STEP 4

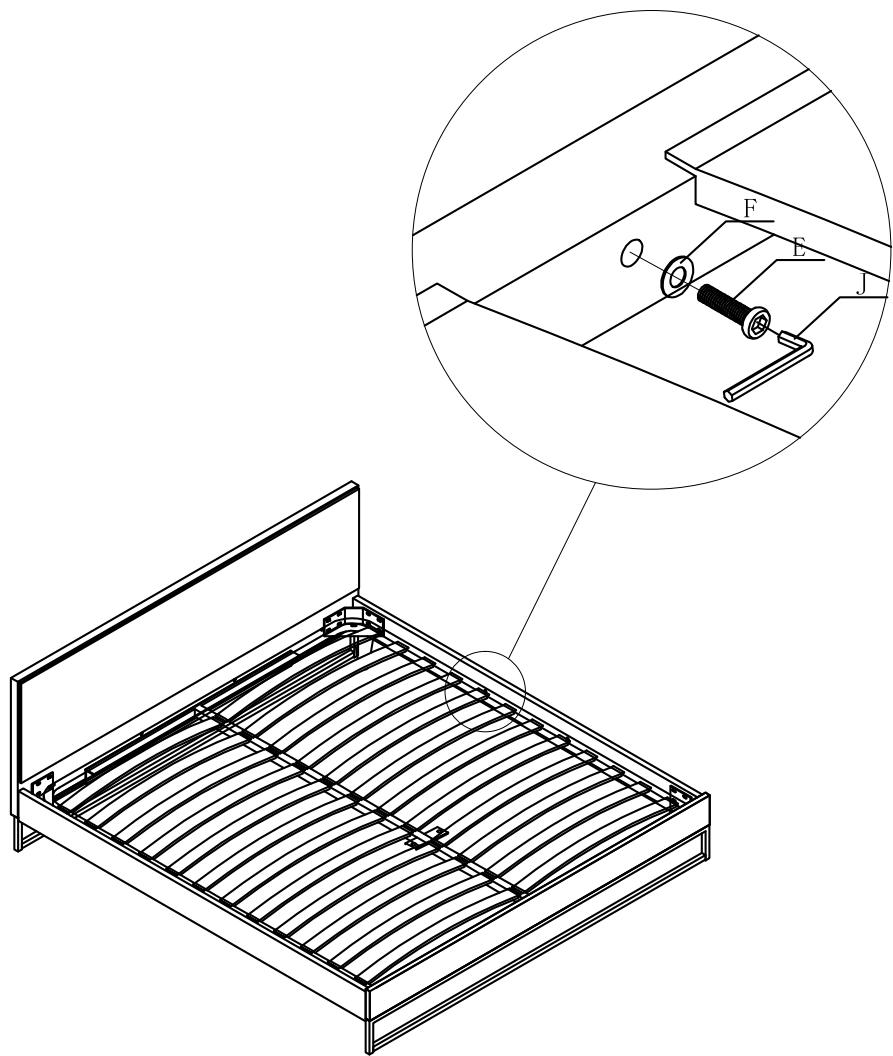

STEP 5

