


ROVECONCEPTS

Refined Luxury Living

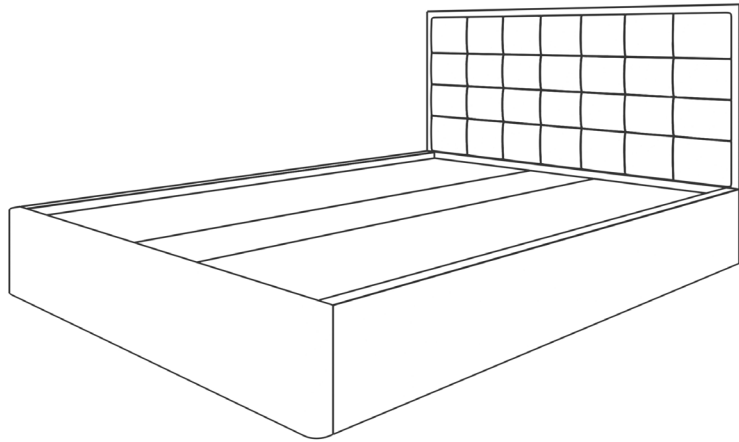

CHARLOTTE BED ASSEMBLY INSTRUCTIONS

HARDWARE




A

x 8
M6*30



B

x16
M8*30



C

x4
M8*100



D

x24
M8*30



E

x8
ø13*ø6*2



F

x20
ø17*ø8*2



G

x4
M8



H

x1
M4



I

x4



J

x1
M5



K

x1
14M



L

x1
M6




M

x12
3.5*15



N


x31
ø15

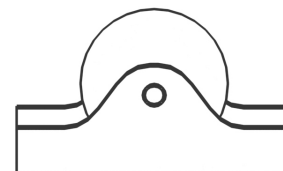


O

x6


STEP 1

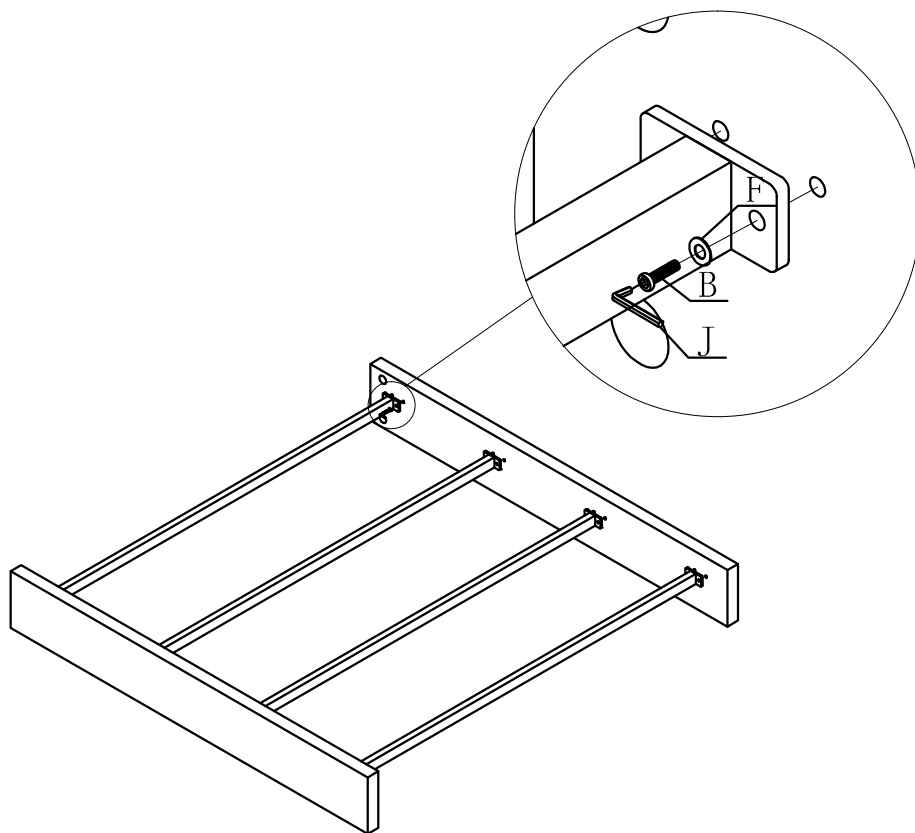


STEP 2

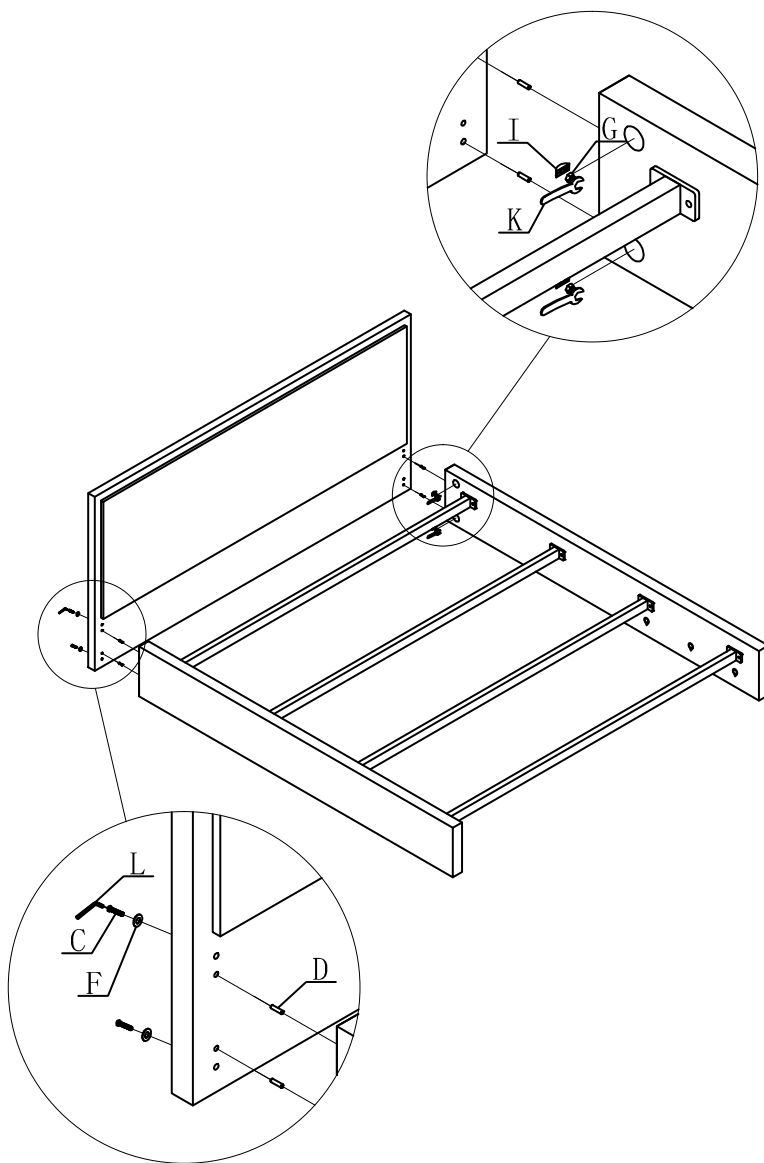


STEP 3

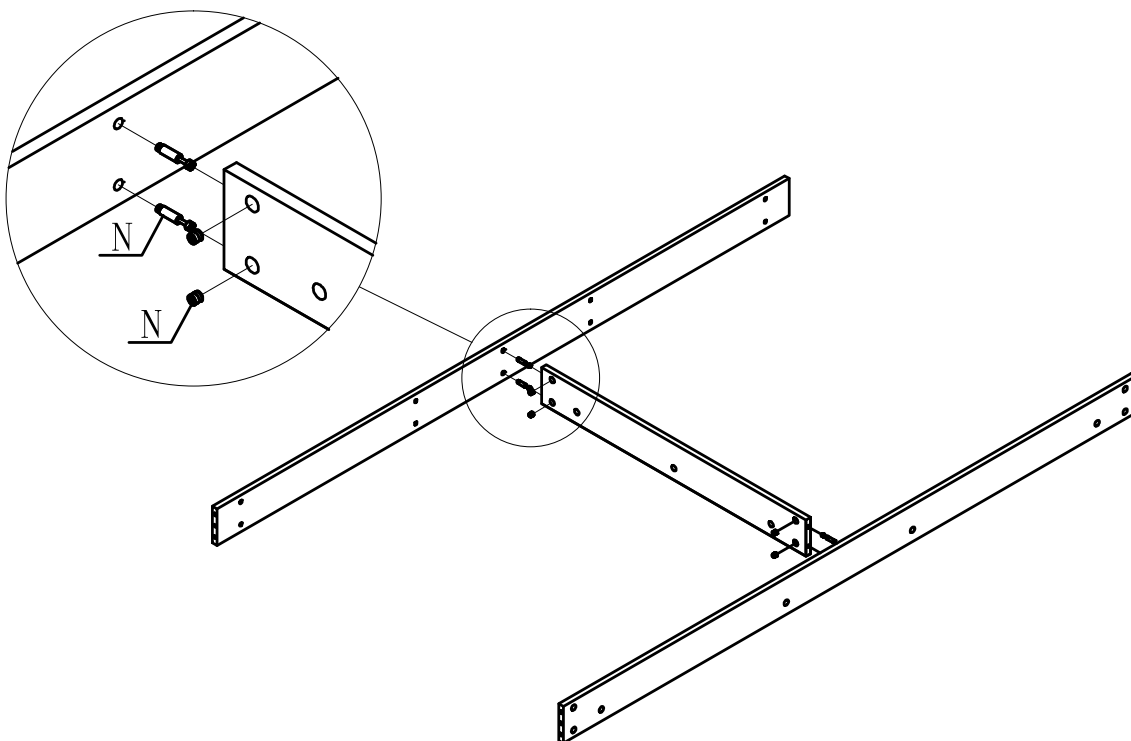


STEP 4

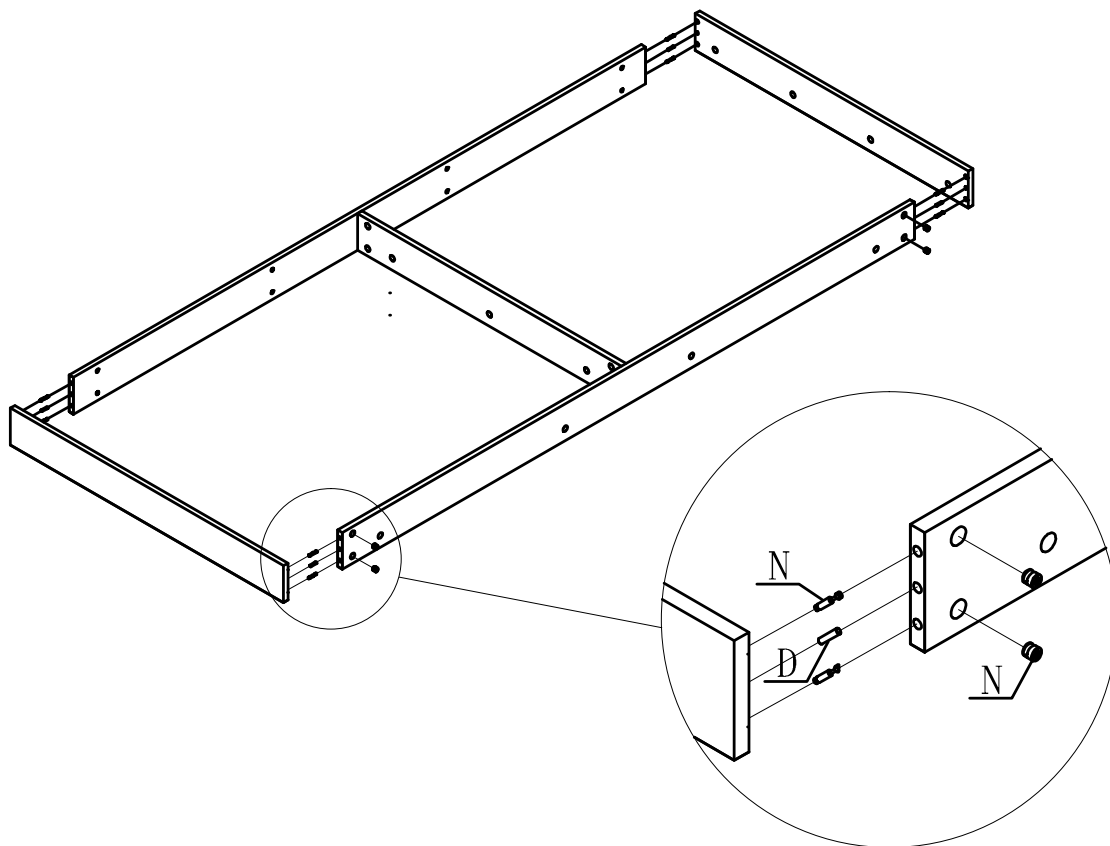


STEP 5

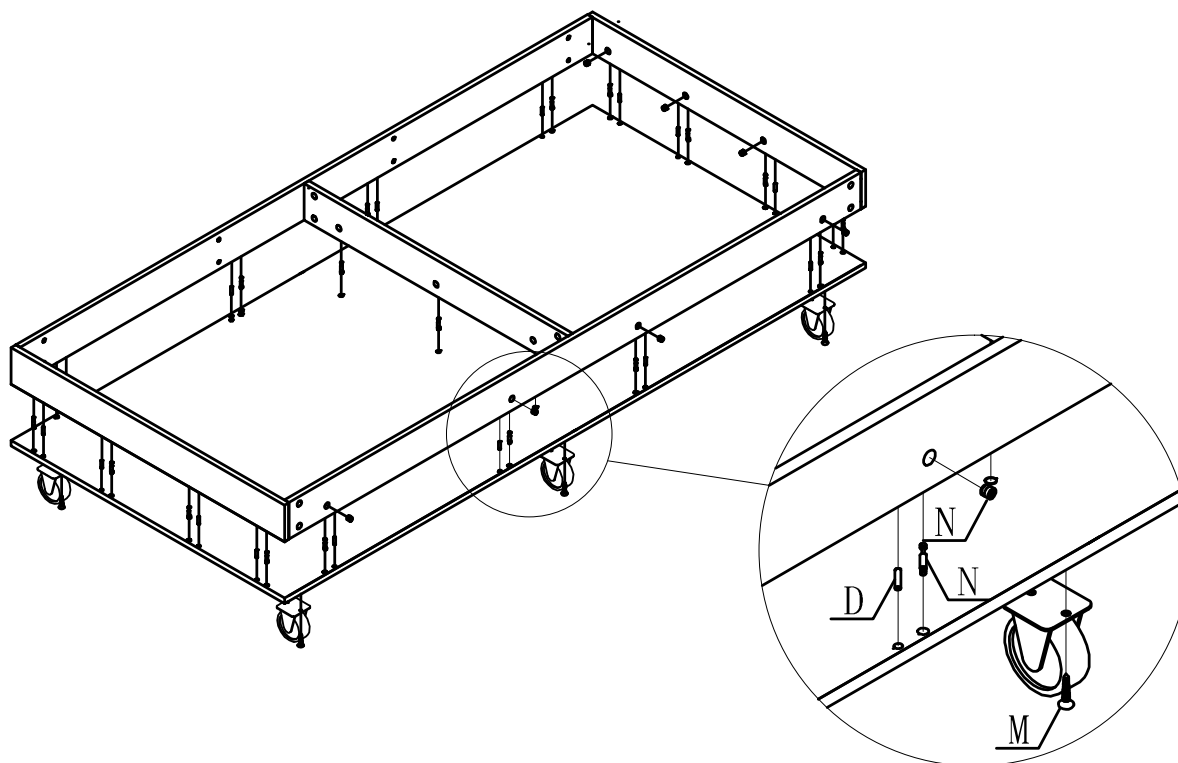


STEP 6

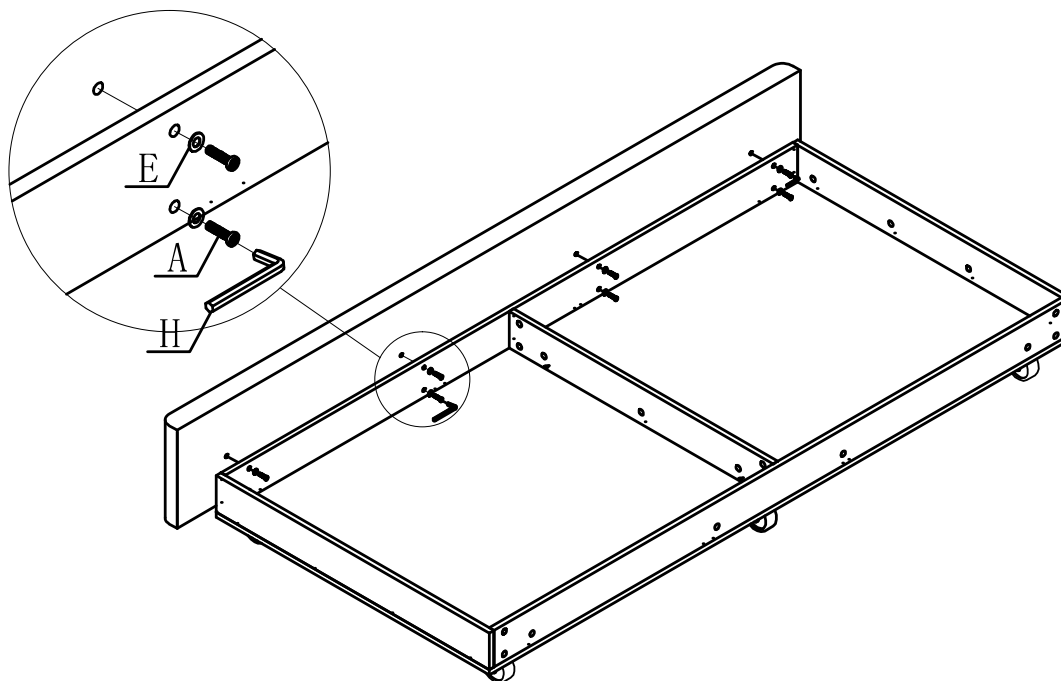

STEP 7

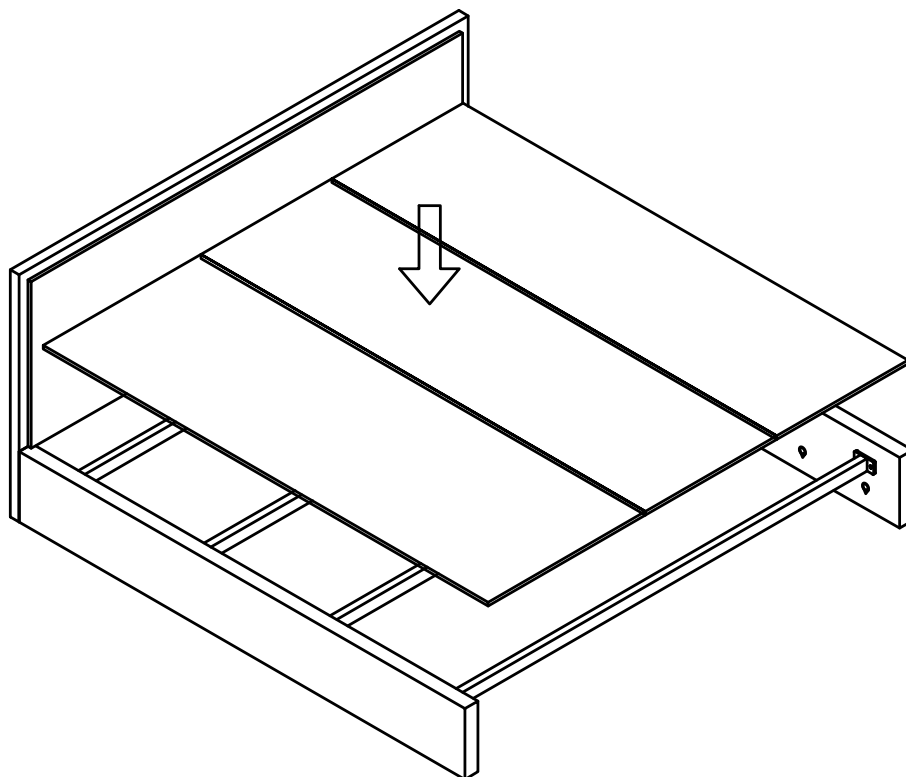

STEP 8

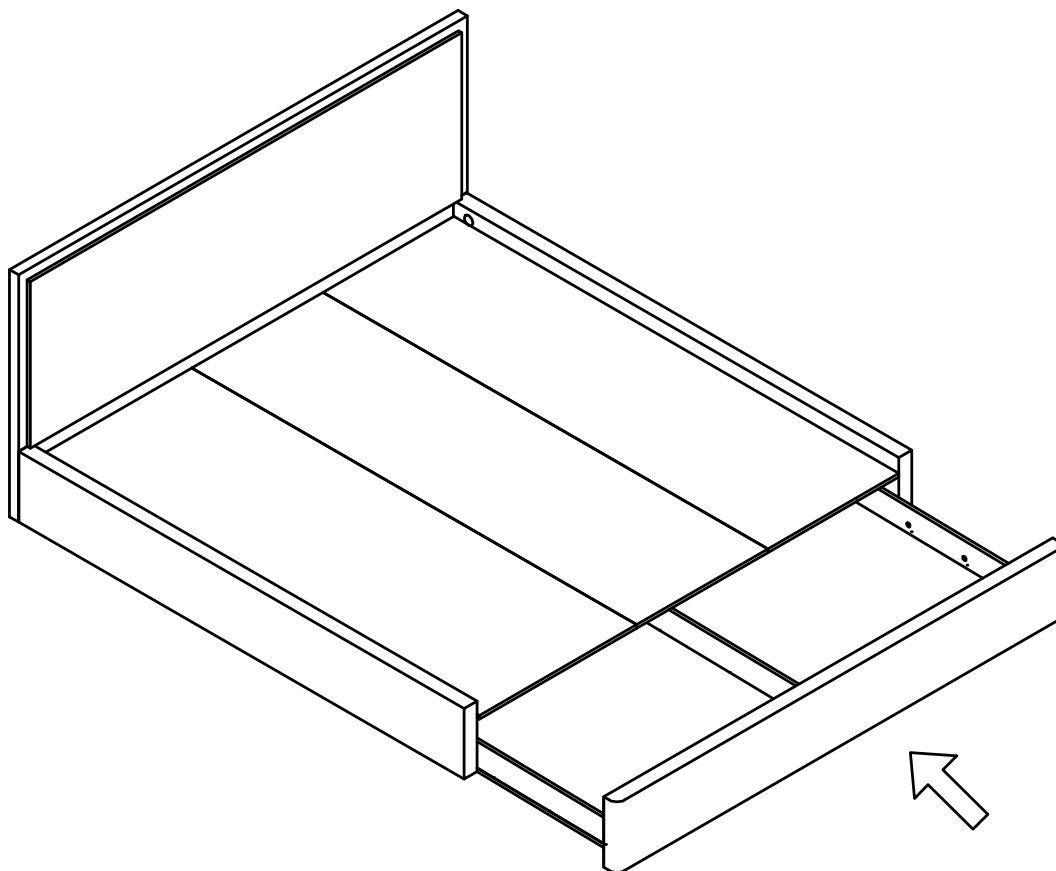

STEP 9

