


# ROVECONCEPTS

Refined Luxury Living

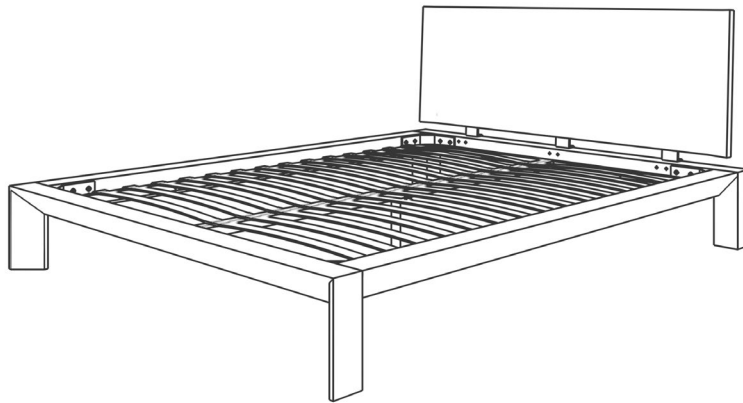

## **XANDER BED ASSEMBLY INSTRUCTIONS**

# HARDWARE


**A**

x 2  
M8\*150


**B**


x42  
ø17\*8\*2


**C**

x34  
M8\*20


**D**

x2  
ø20\*2


**E**

x8  
M8\*60


**F**

x2  
M8\*16


**G**

x6  
M8


**H**

x1  
M5


**I**

x8  
M10\*40


**J**

x1  
M6


**K**

x1  
14M



**L**

x2  
M8\*90



**M**

x4


# STEP 1

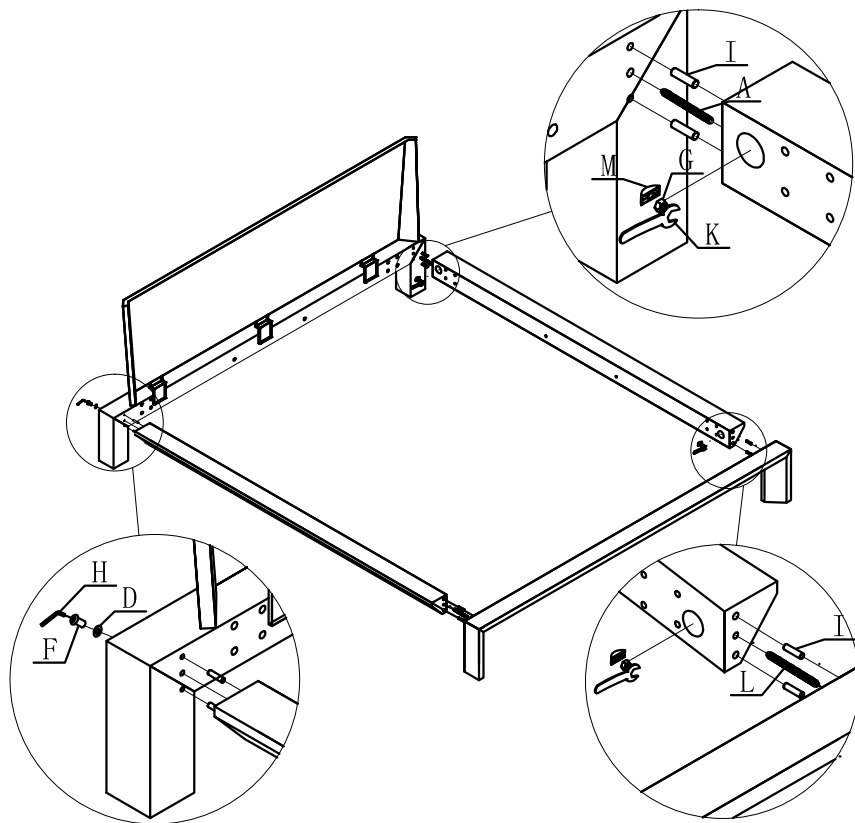


# STEP 2

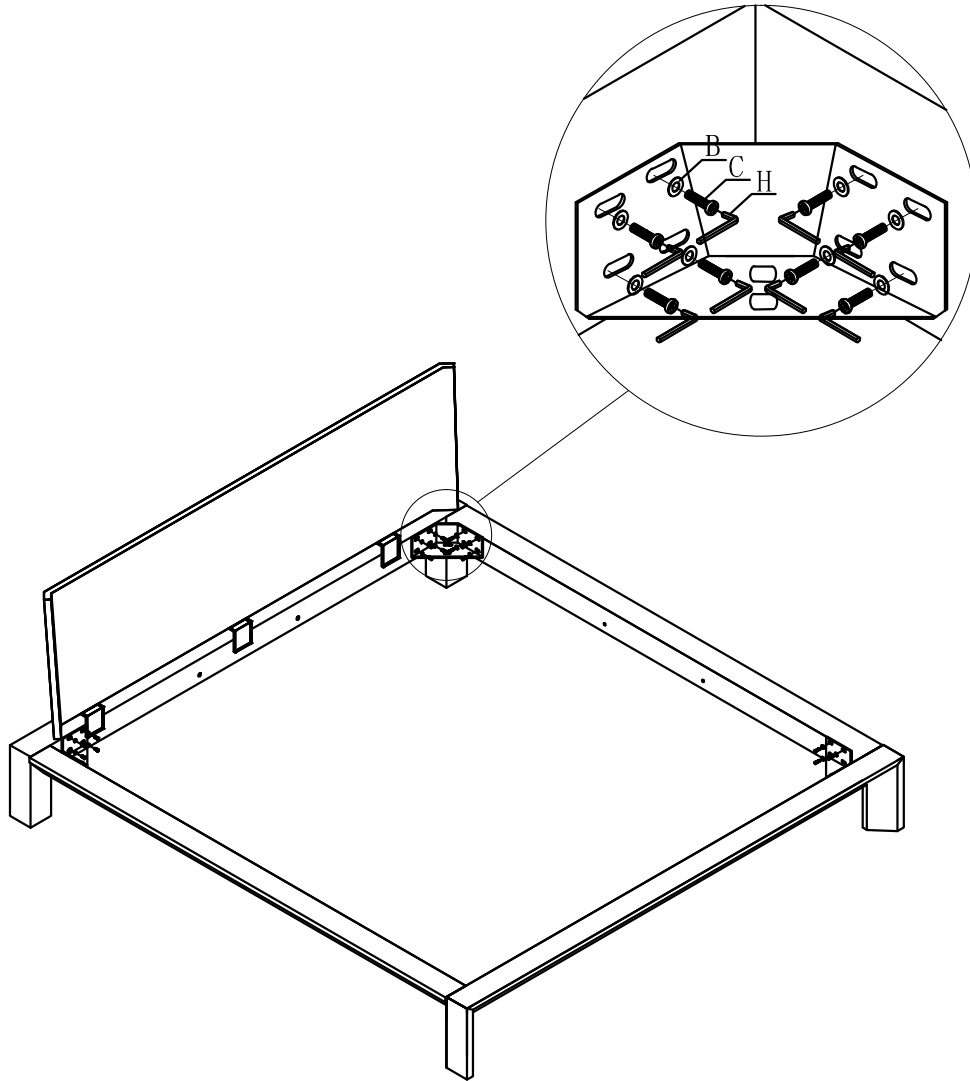

# STEP 3

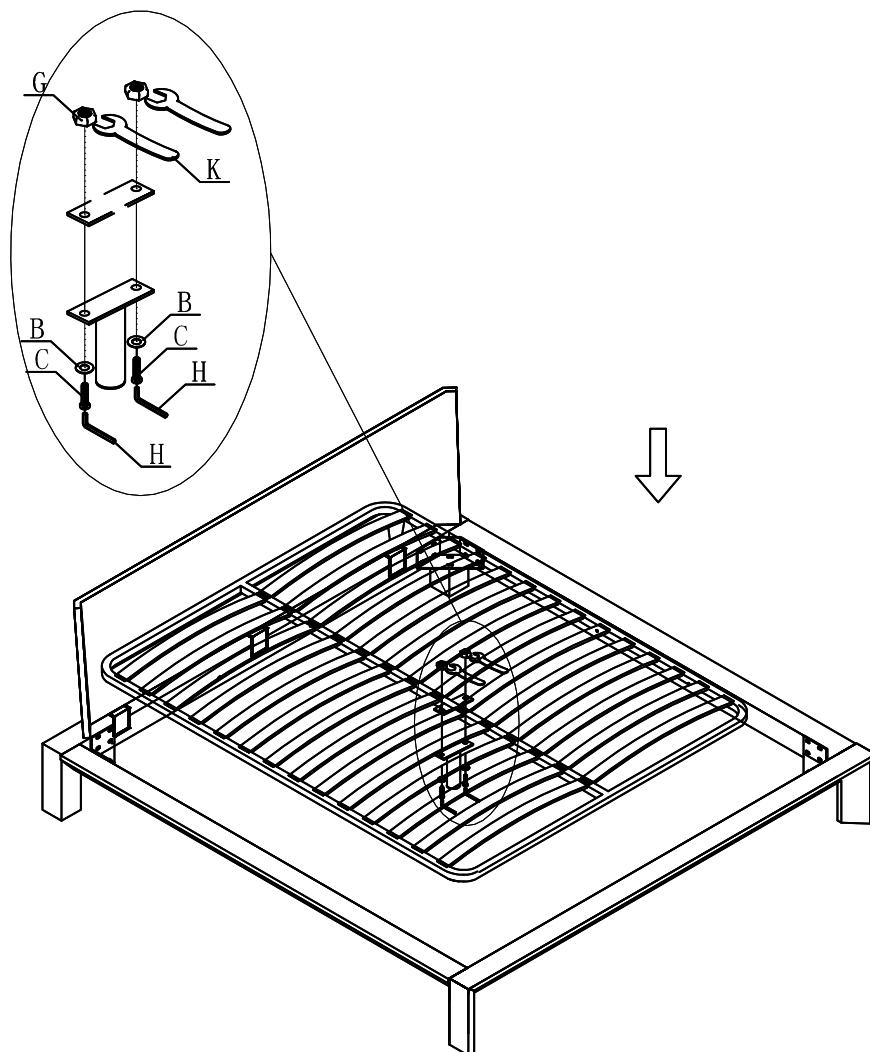

# STEP 4

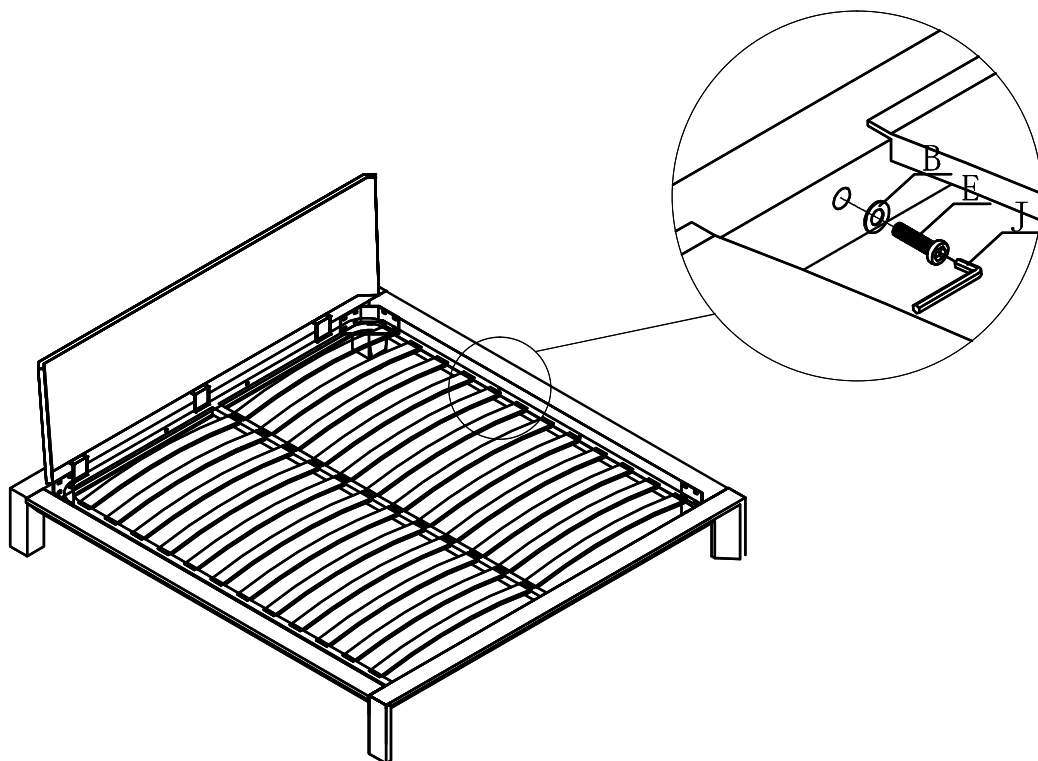

# STEP 5

