



# ROVECONCEPTS

Refined Luxury Living

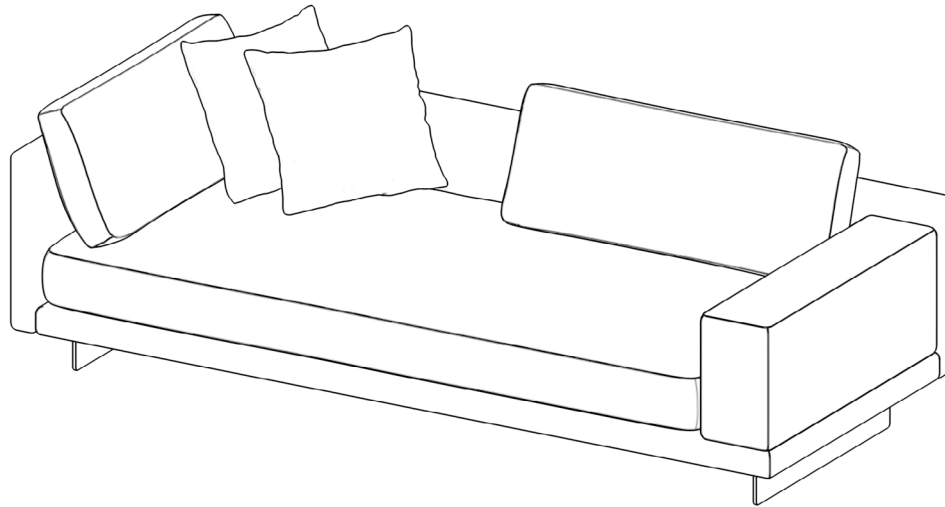

## **DRESDEN LEFT/RIGHT ARM SOFA ASSEMBLY INSTRUCTIONS**

# HARDWARE




**A**

x8  
M8\*25



**B**


x8  
ø17\* ø10\*2

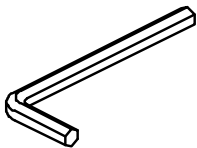

**C**

x1  
M5

# STEP 1

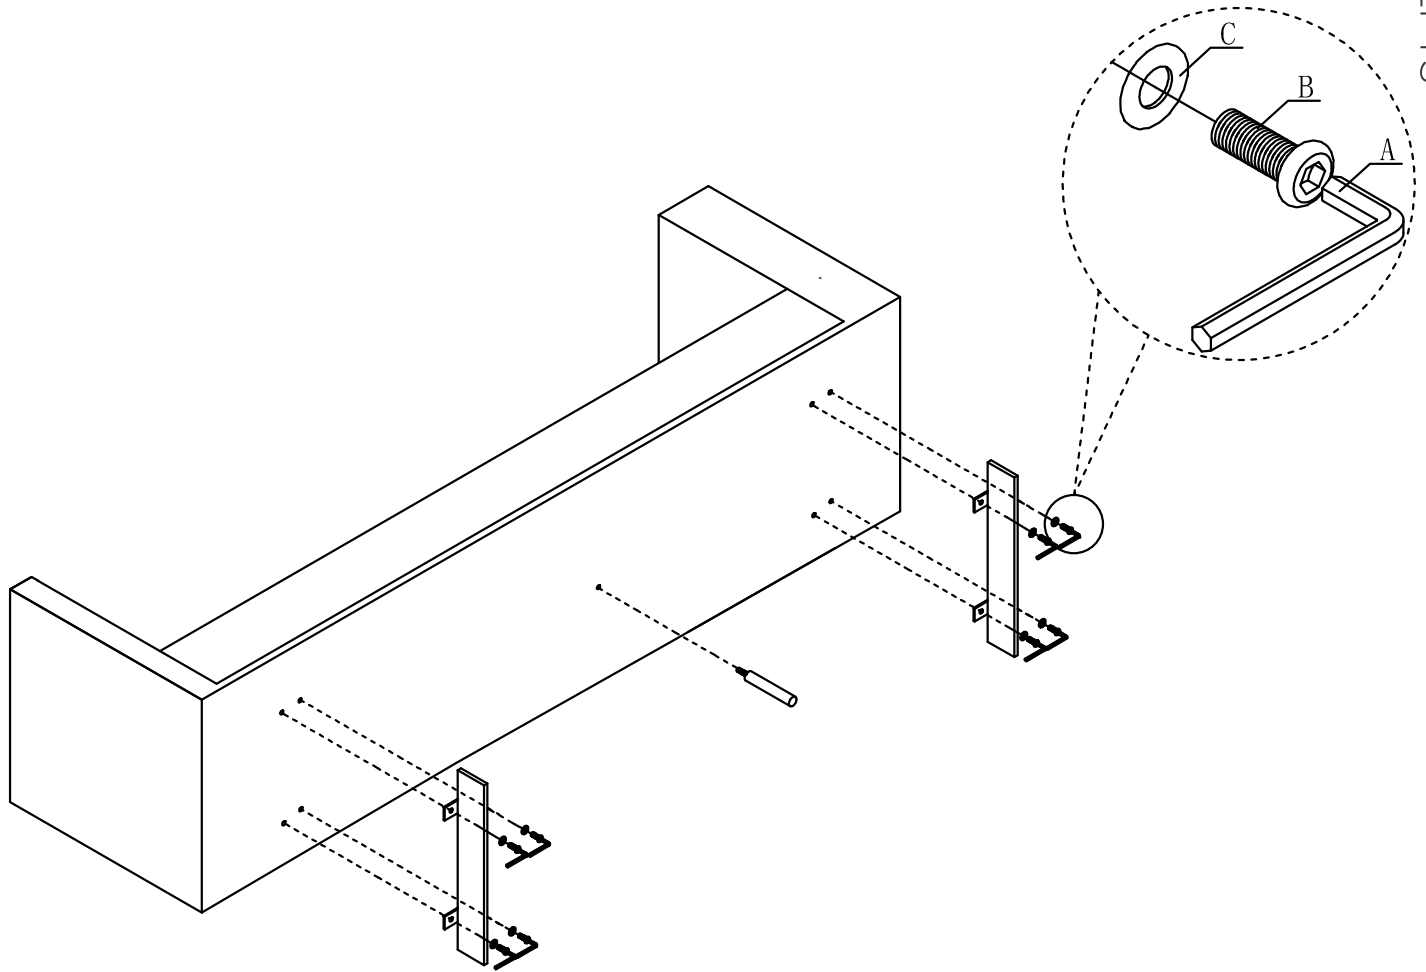

# STEP 2

