



ROVECONCEPTS

Refined Luxury Living

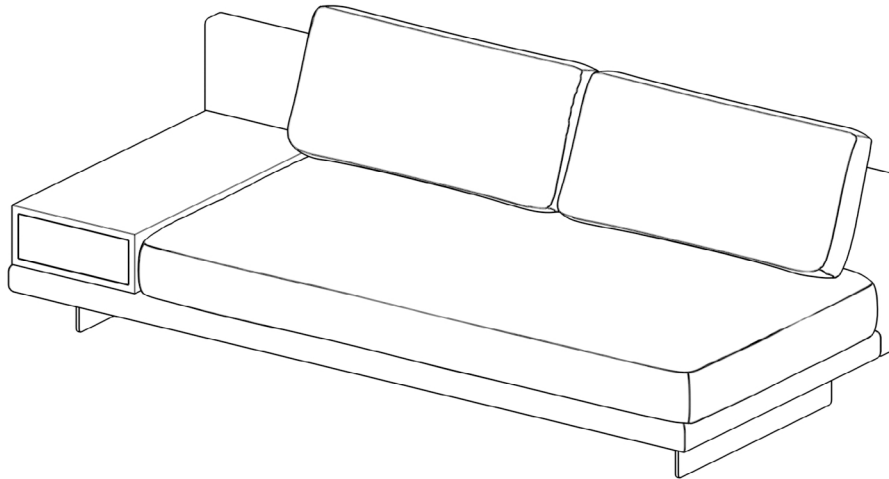

DRESDEN ARMLESS SOFA ASSEMBLY INSTRUCTIONS

HARDWARE




A

x8
M8*25




B

x8
ø17* ø10*2

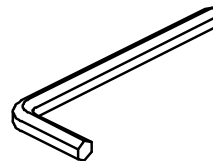

C

x1
M5

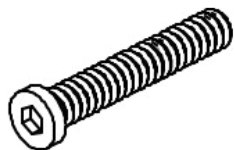


D

x2
M6*120



E


x2
ø13* ø6*1

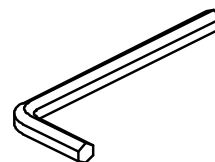

F

x1
M4

STEP 1

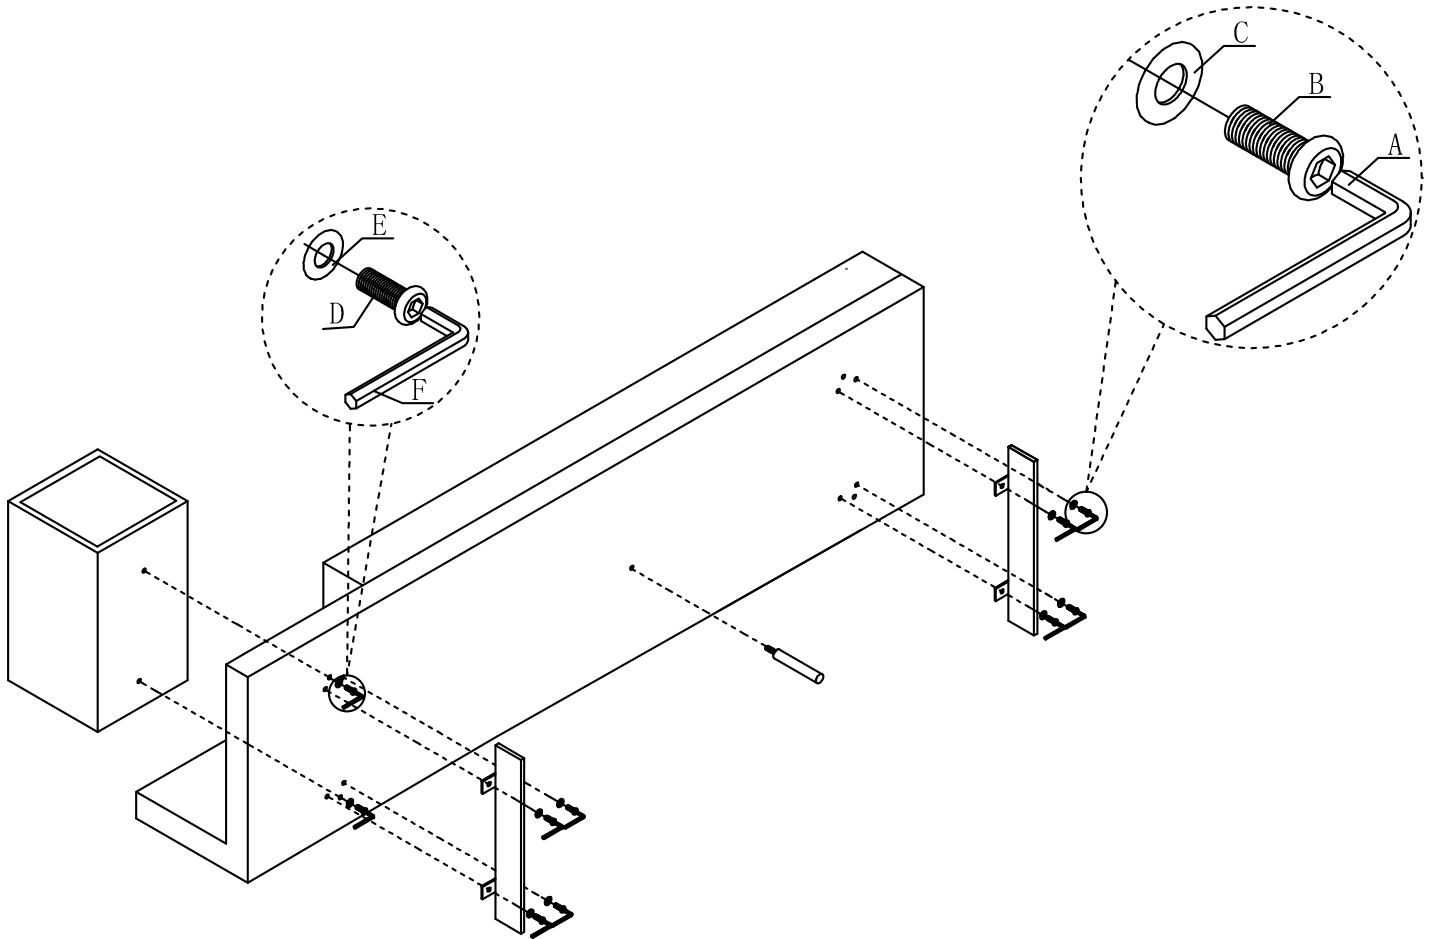

STEP 2

