



# ROVECONCEPTS

Refined Luxury Living

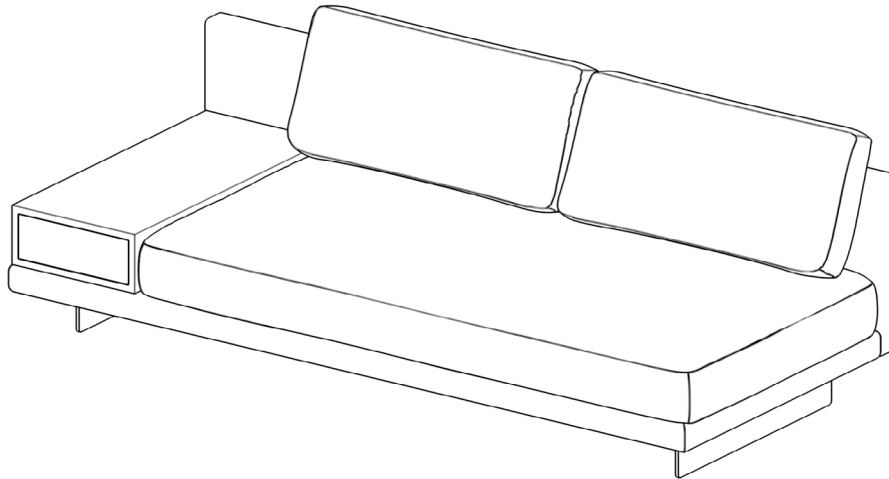

## **DRESDEN ARMLESS SOFA ASSEMBLY INSTRUCTIONS**


# HARDWARE

**A**


x8  
M8\*25

**B**

x8  
ø17\* ø10\*2

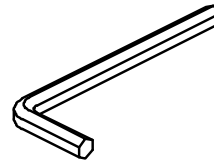**C**


x1  
M5

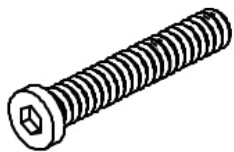**D**

x2  
M6\*120


**E**

x2  
ø13\* ø6\*1

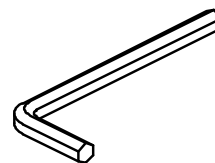
**F**

x1  
M4

# STEP 1

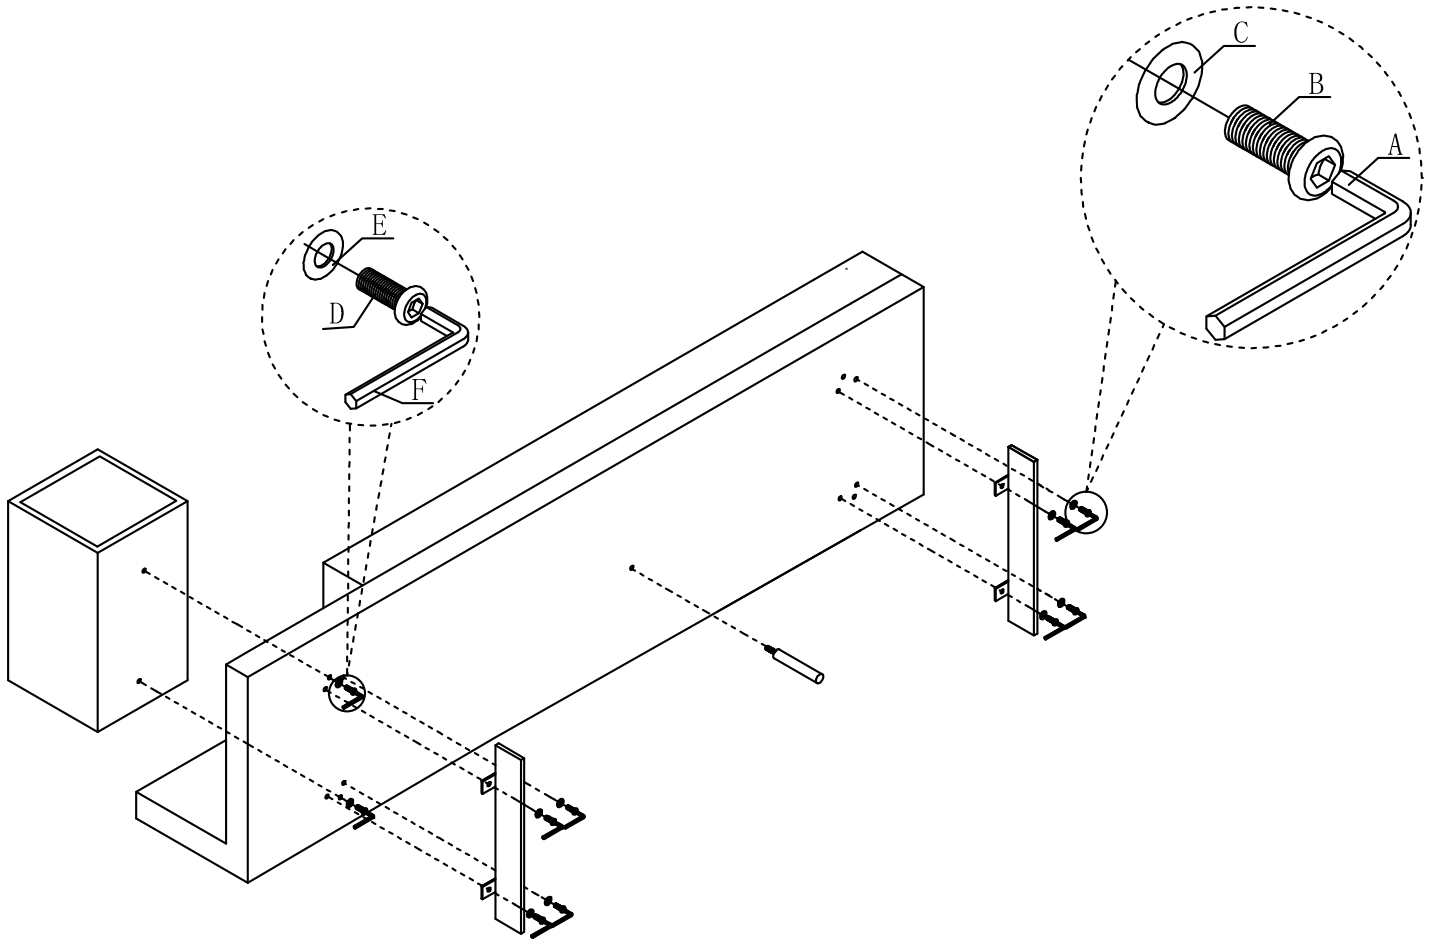


# STEP 2

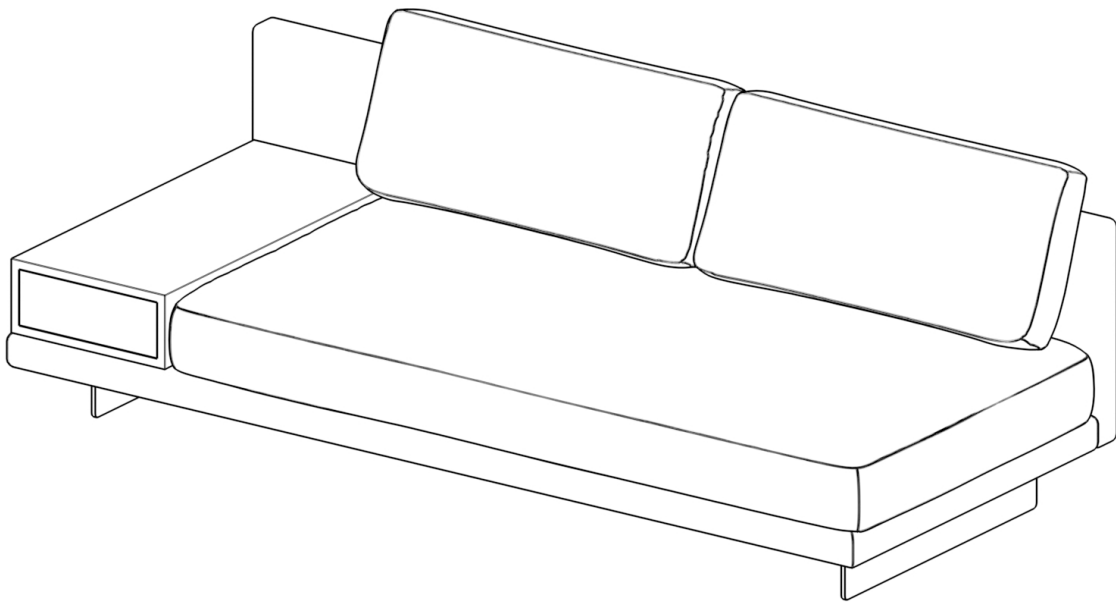


# ROVECONCEPTS

Refined Luxury Living

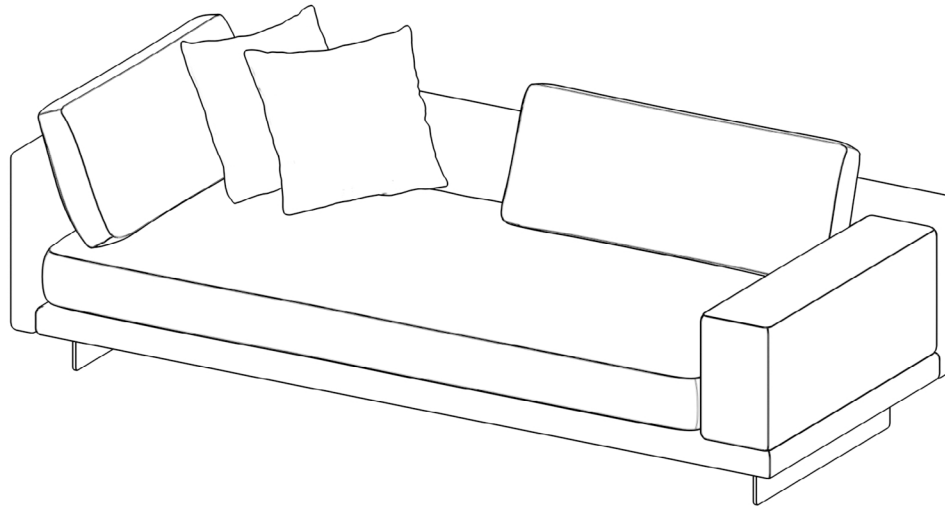

## **DRESDEN LEFT/RIGHT ARM SOFA ASSEMBLY INSTRUCTIONS**

# HARDWARE




**A**

x8  
M8\*25



**B**


x8  
ø17\* ø10\*2

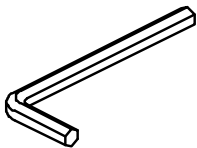


**C**

x1  
M5

# STEP 1

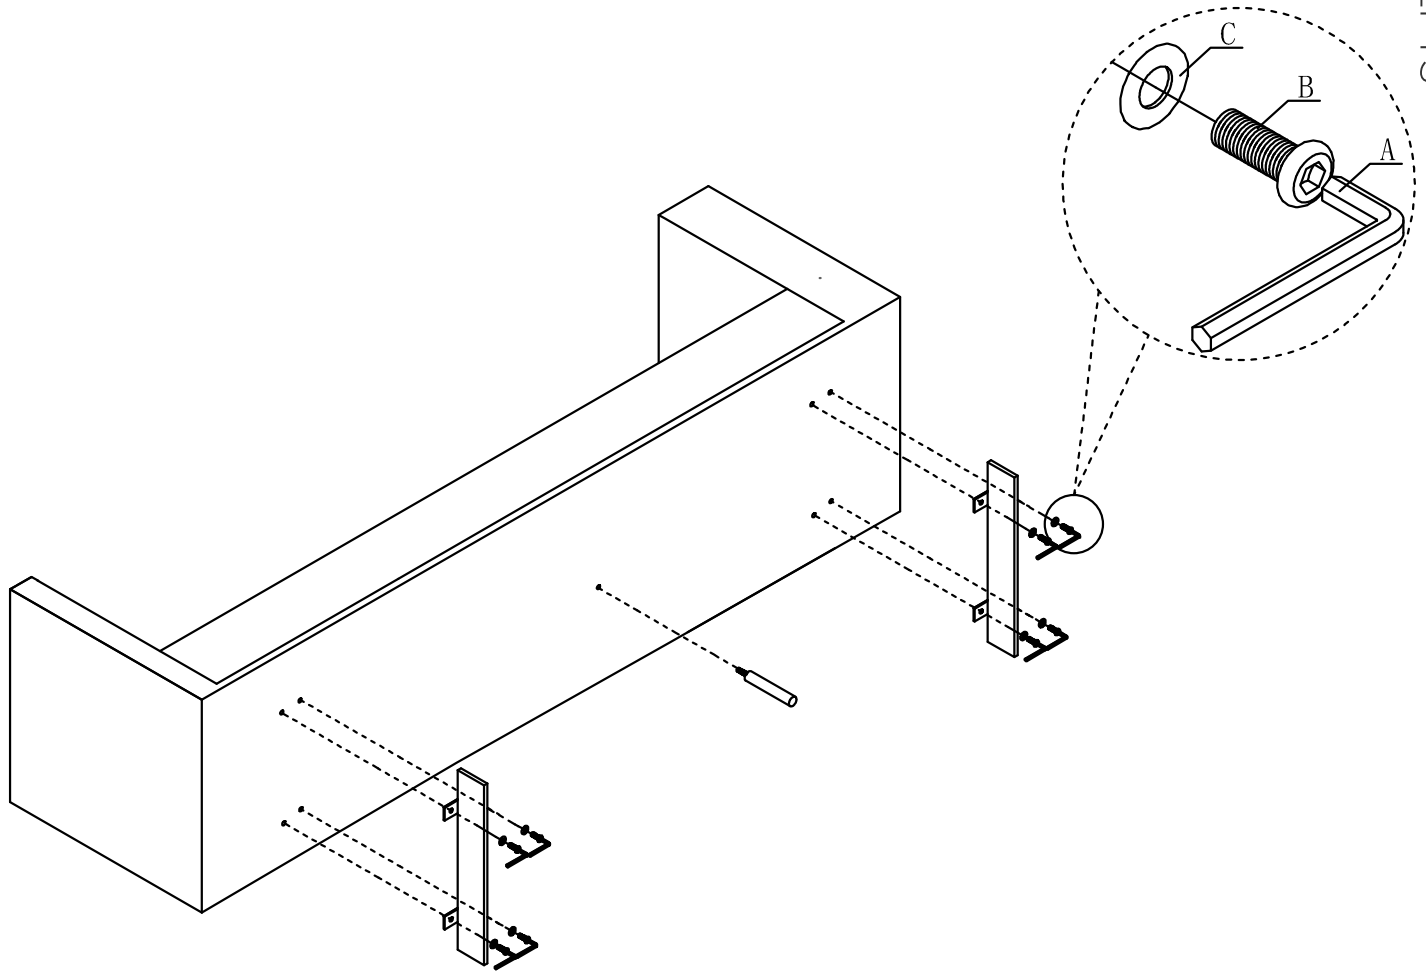


# STEP 2

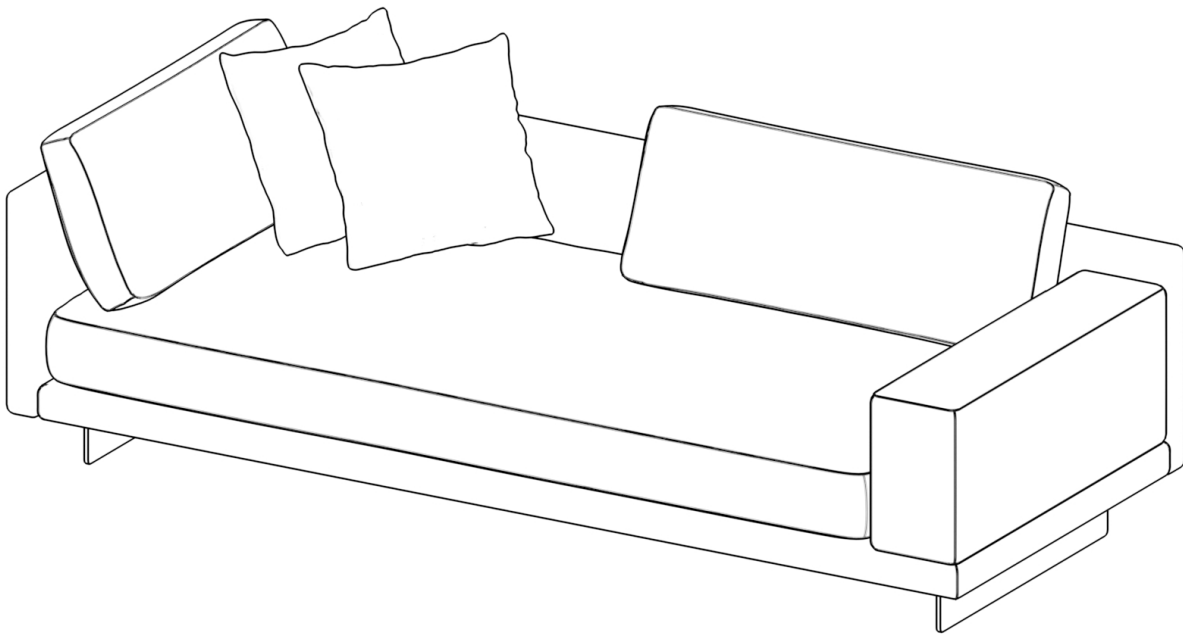




# ROVECONCEPTS

Refined Luxury Living

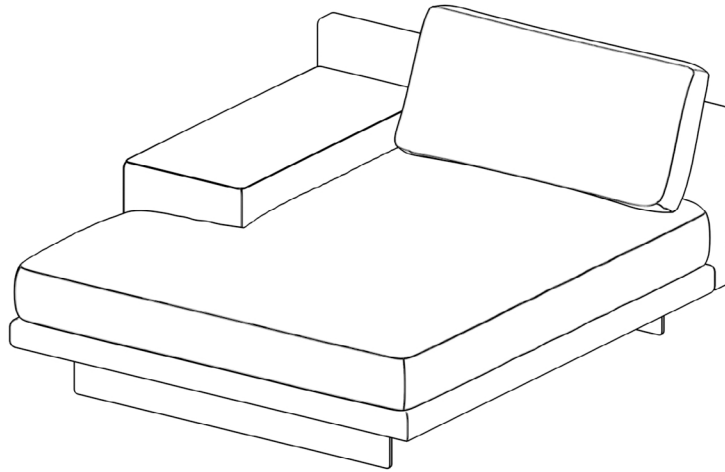

**DRESDEN LEFT/RIGHT CHAISE  
WITH ARMREST  
ASSEMBLY INSTRUCTIONS**

# HARDWARE




**A**

x8  
M8\*25



**B**


x8  
ø17\* ø10\*2

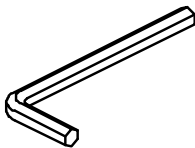

**C**

x1  
M5

# STEP 1

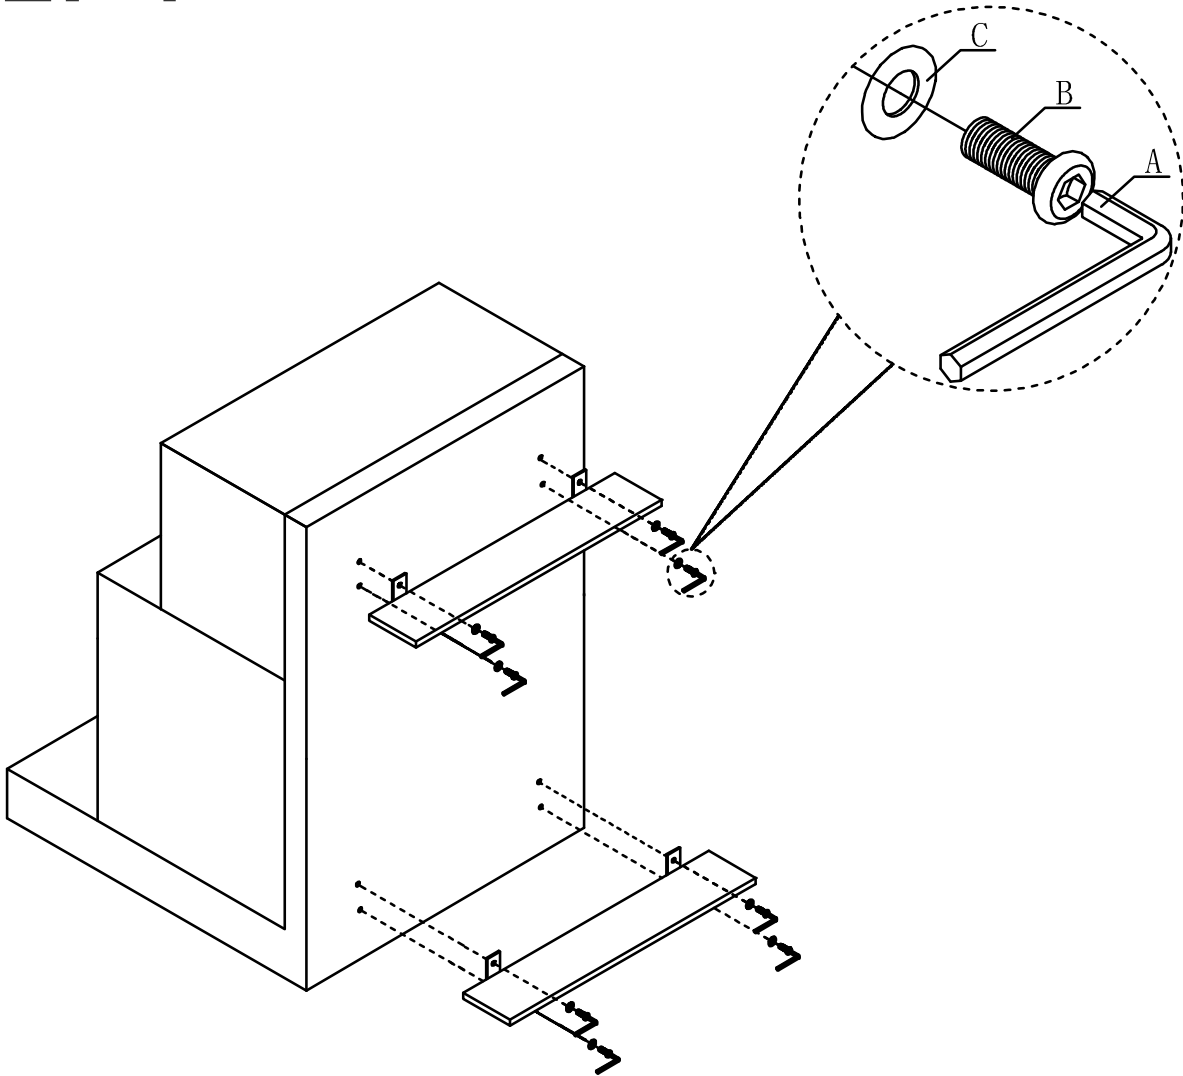

# STEP 2

