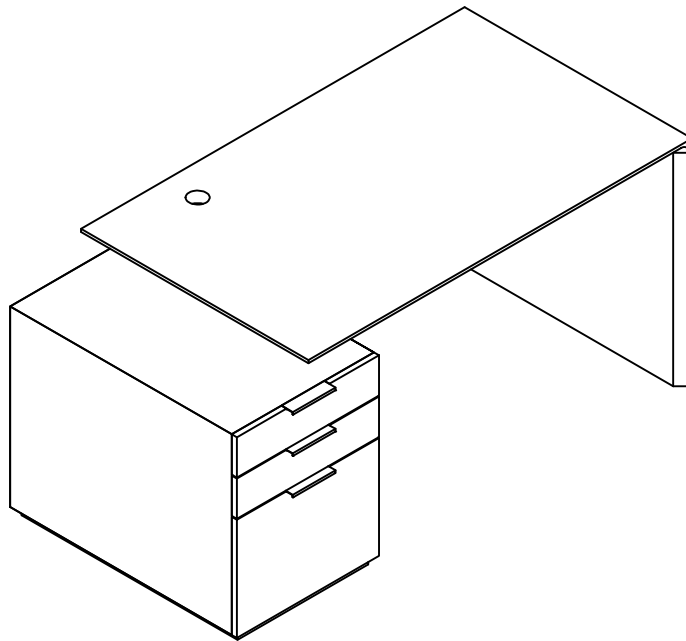


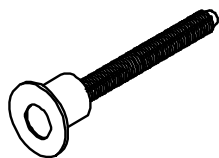
# ROVECONCEPTS

Refined Luxury Living

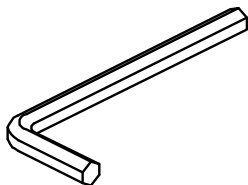


## GEORGIO DESK ASSEMBLY INSTRUCTIONS

# HARDWARE


**A**

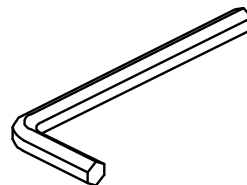
x3  
M8\*720


**B**

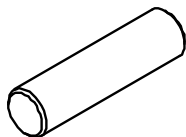
x1  
M4


**C**

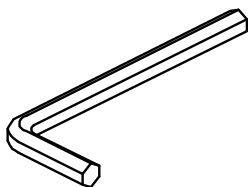
x3  
Ø20\*Ø10\*2


**D**


x1  
M5


**E**


x4  
Ø8\*30


**F**

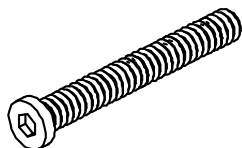
x1  
M6


**G**

x5  
M6\*15


**H**

x22  
M6\*20


**I**

x3  
M8\*105


**J**

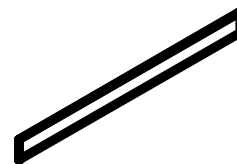
x3  
Ø17\*Ø8\*2


**K**

x5  
Ø13\*Ø6\*1

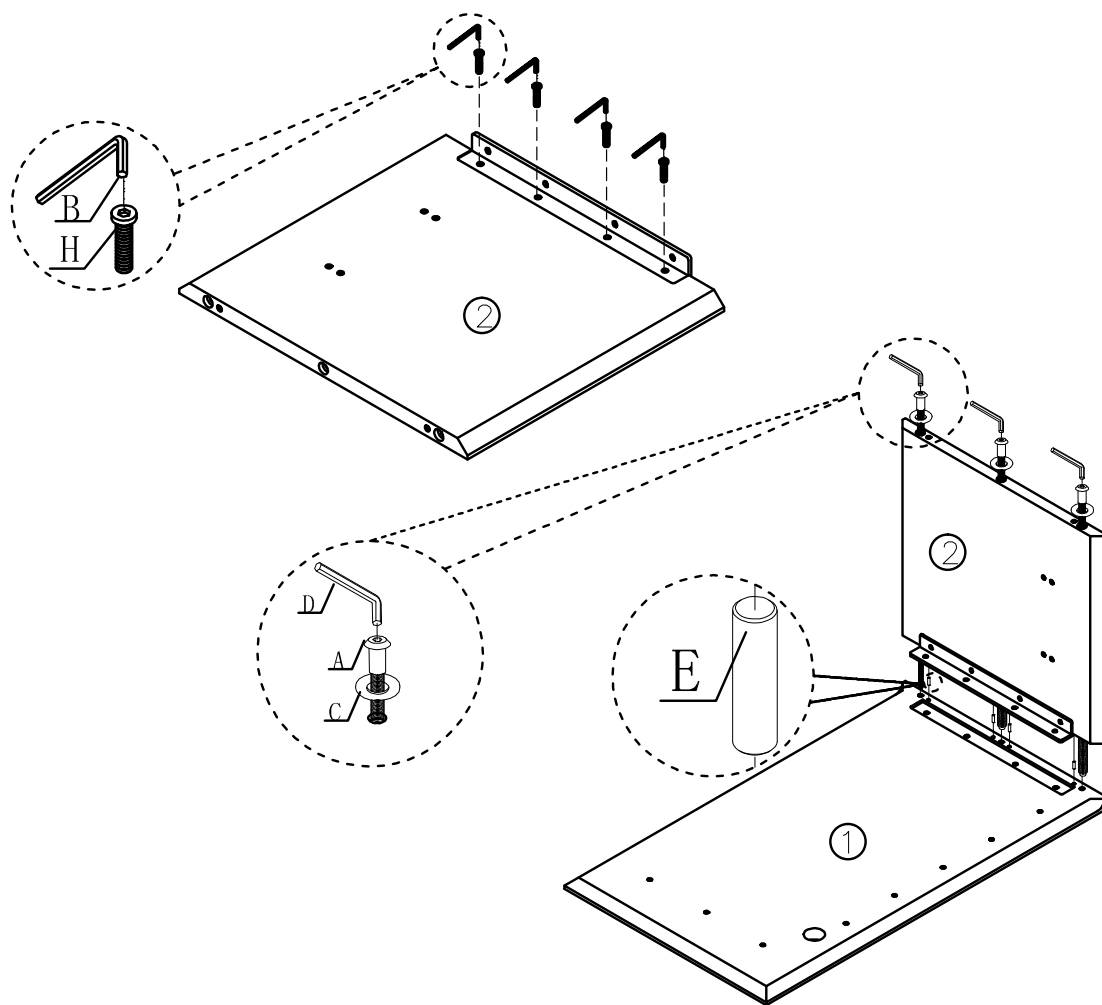

**L**

x2

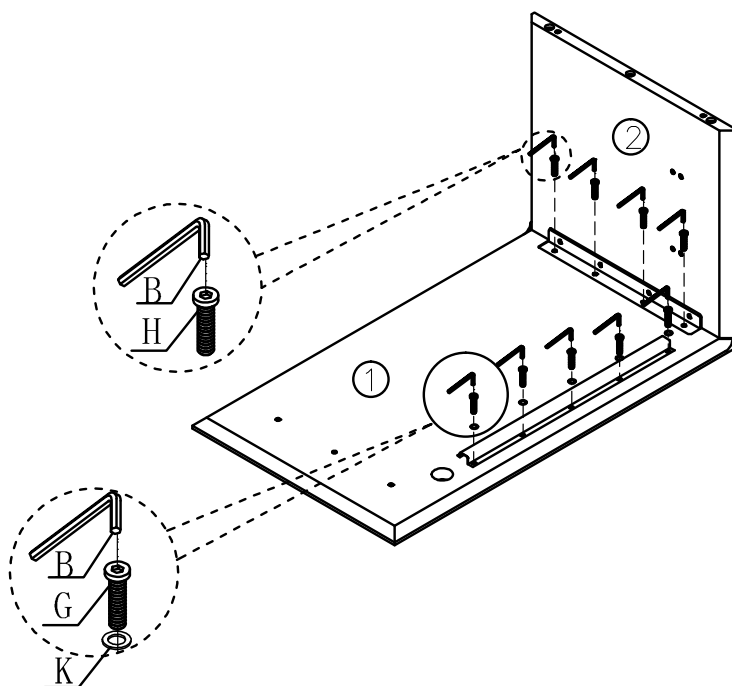

**M**

x1  
L=378MM

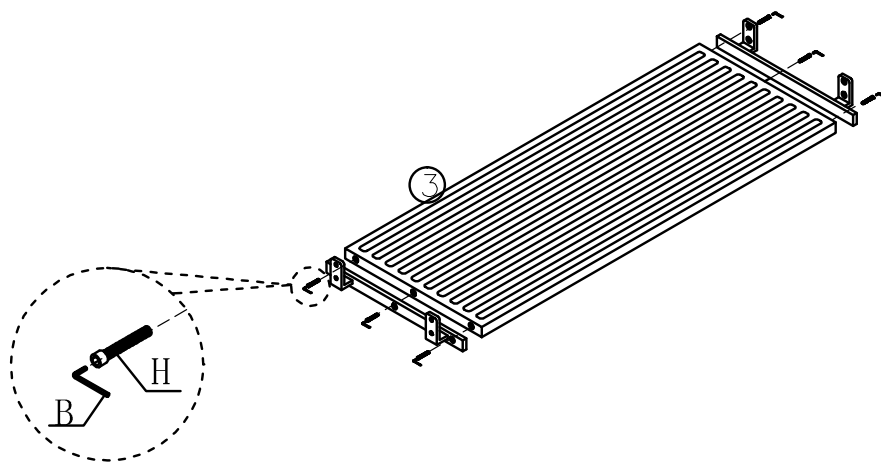
# STEP 1



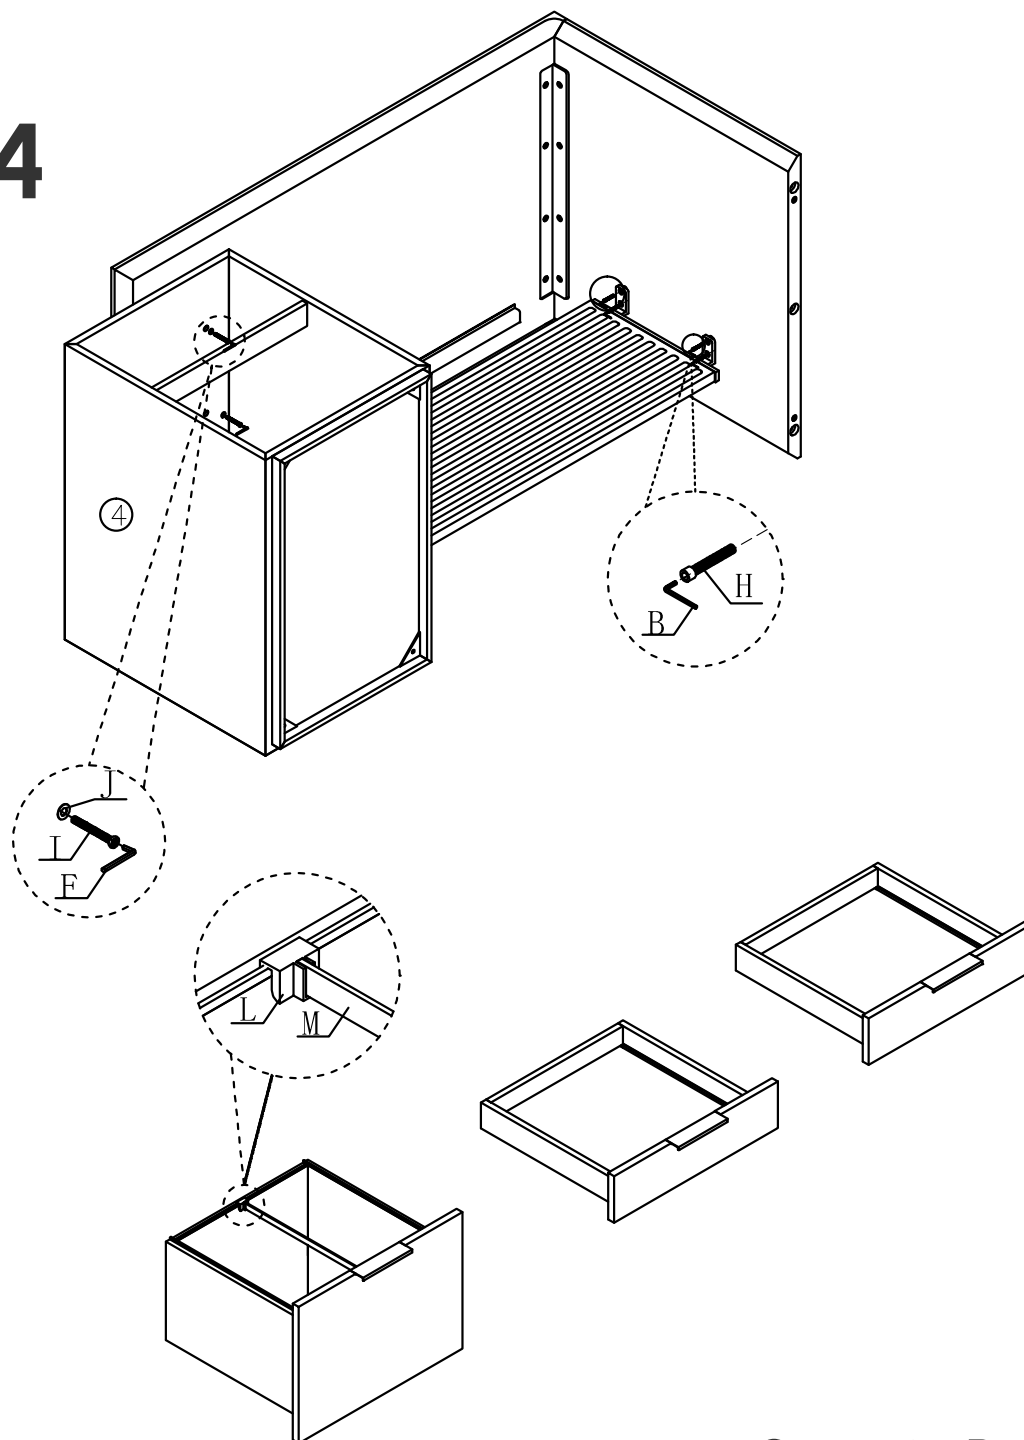
# STEP 2



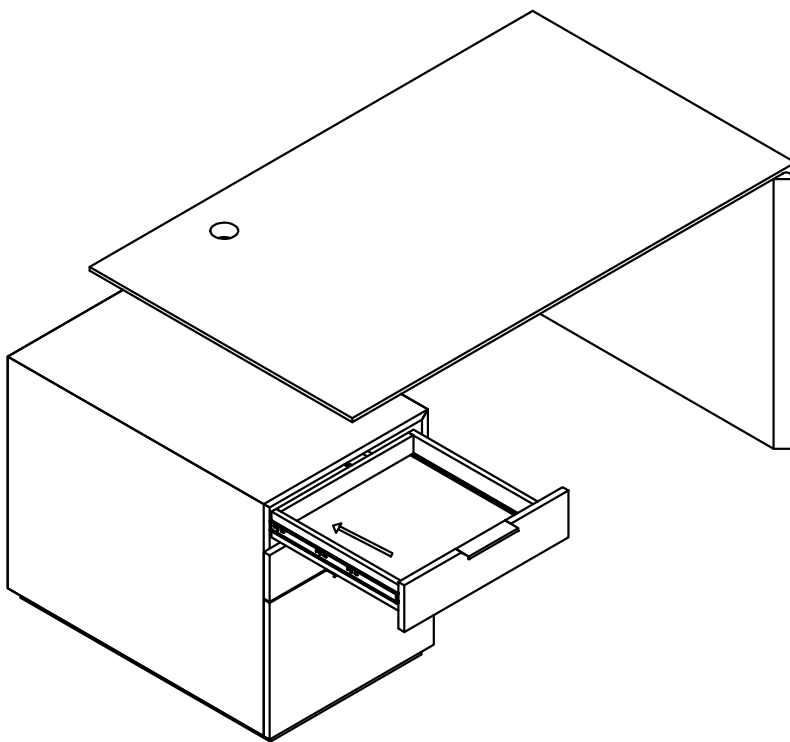
# STEP 3



# STEP 4



# STEP 5



# STEP 6

