


ROVECONCEPTS

Refined Luxury Living

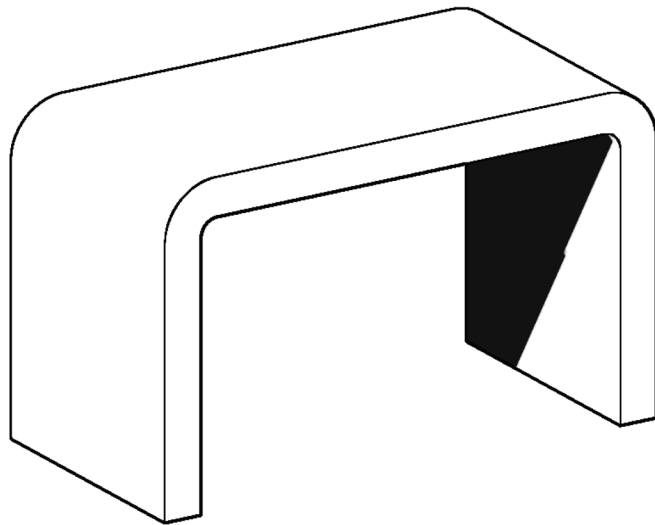

CASCADIA DESK
ASSEMBLY INSTRUCTIONS

HARDWARE



A

x4
18mm Screw Rod



B


x4
18mm Nut Gasket



C


x4
18mm Nut

STEP 1

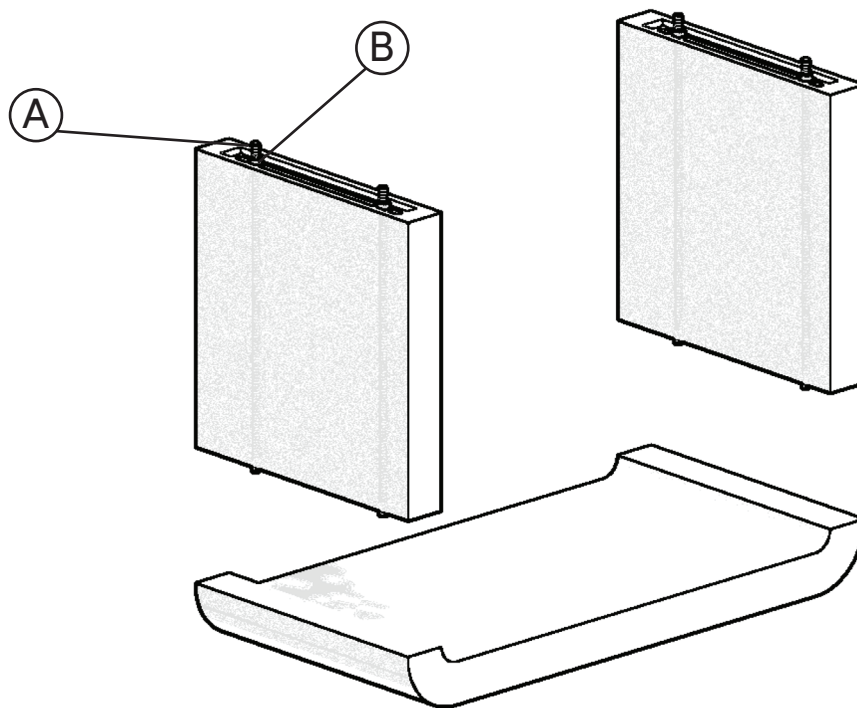


Turn the desktop upside down with the bottom facing up. Put the legs on the desktop at the right positions and put in 18mm screw rod. Pay attention to the screw hole at the bottom of the desktop during the installation of the screw. Next put in 18mm nut gasket. Note there is a groove screw position at the bottom of the table leg.

STEP 2

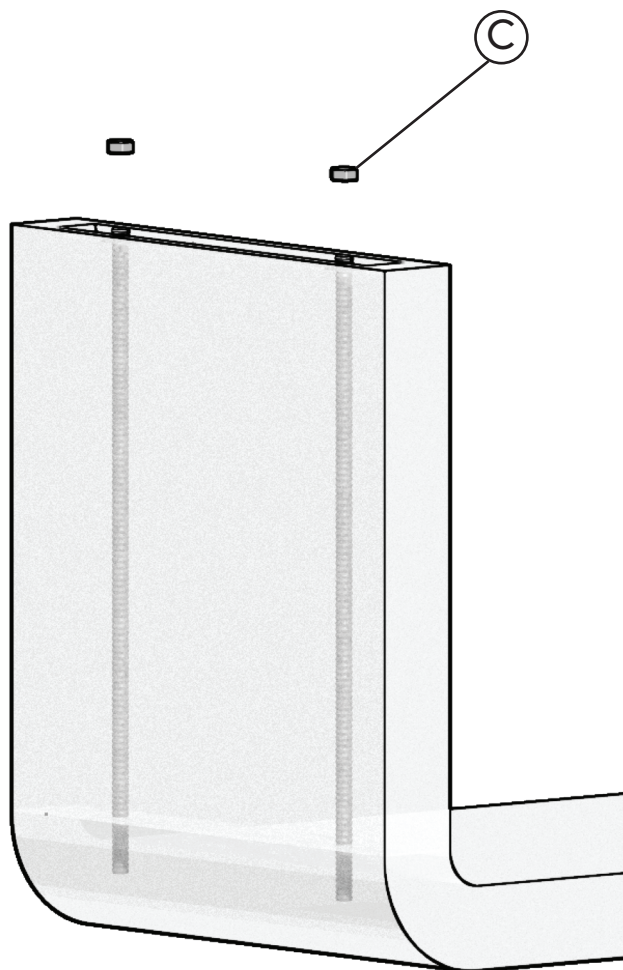

Fix the screw and gasket,
and then put in 18mm nut.

STEP 3

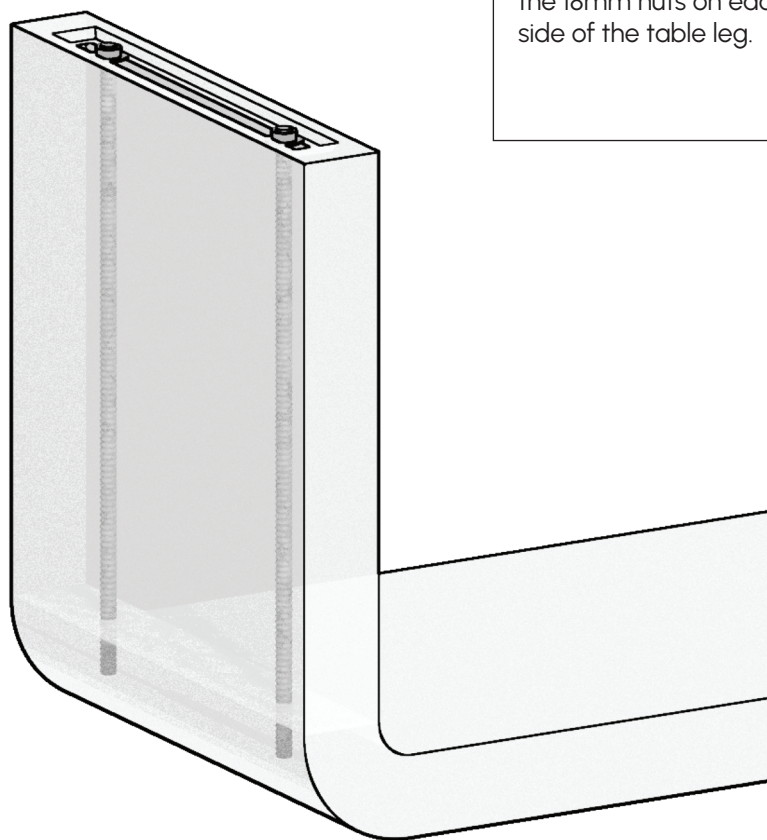

Use wrench to tighten
the 18mm nuts on each
side of the table leg.

STEP 4

