


# ROVECONCEPTS

Refined Luxury Living

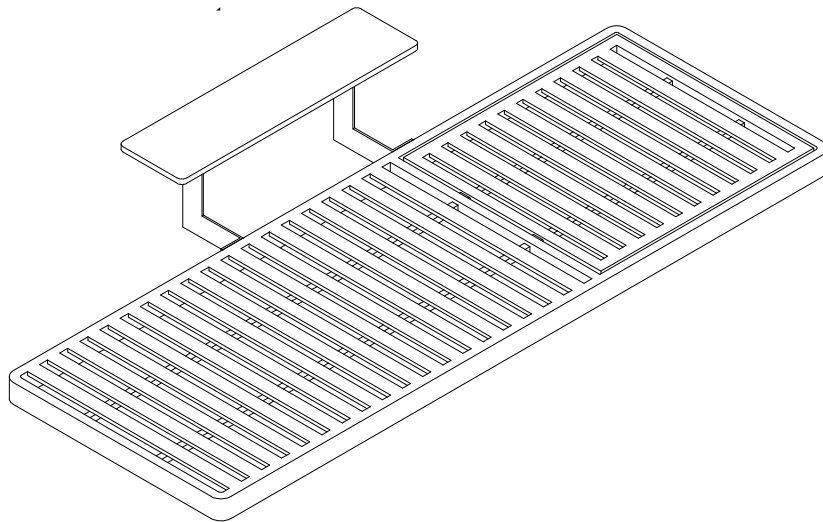

## FLORIAN OUTDOOR LOUNGER ASSEMBLY INSTRUCTIONS

# HARDWARE




**A**

x1  
Wrench



**B**

x4  
Washer



**C**


x4  
M6\*20mm Screw



**E**

x4  
Cover

# STEP 1

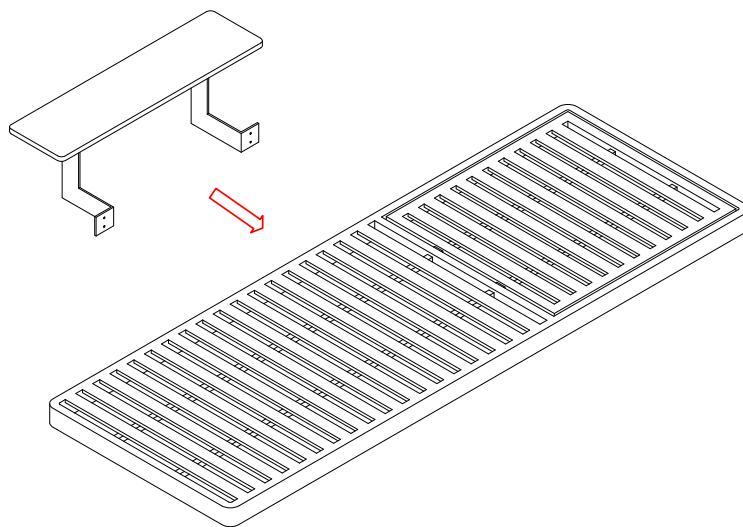

# STEP 2

Tighten all screws and finish.

