


ROVECONCEPTS

AUBREY SIDE CHAIR ASSEMBLY INSTRUCTIONS

HARDWARE

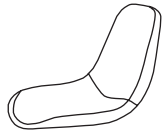

A

x1



B

x1



C

x4
M6x45



D


x4
M6



E

x1
M6

STEP 1

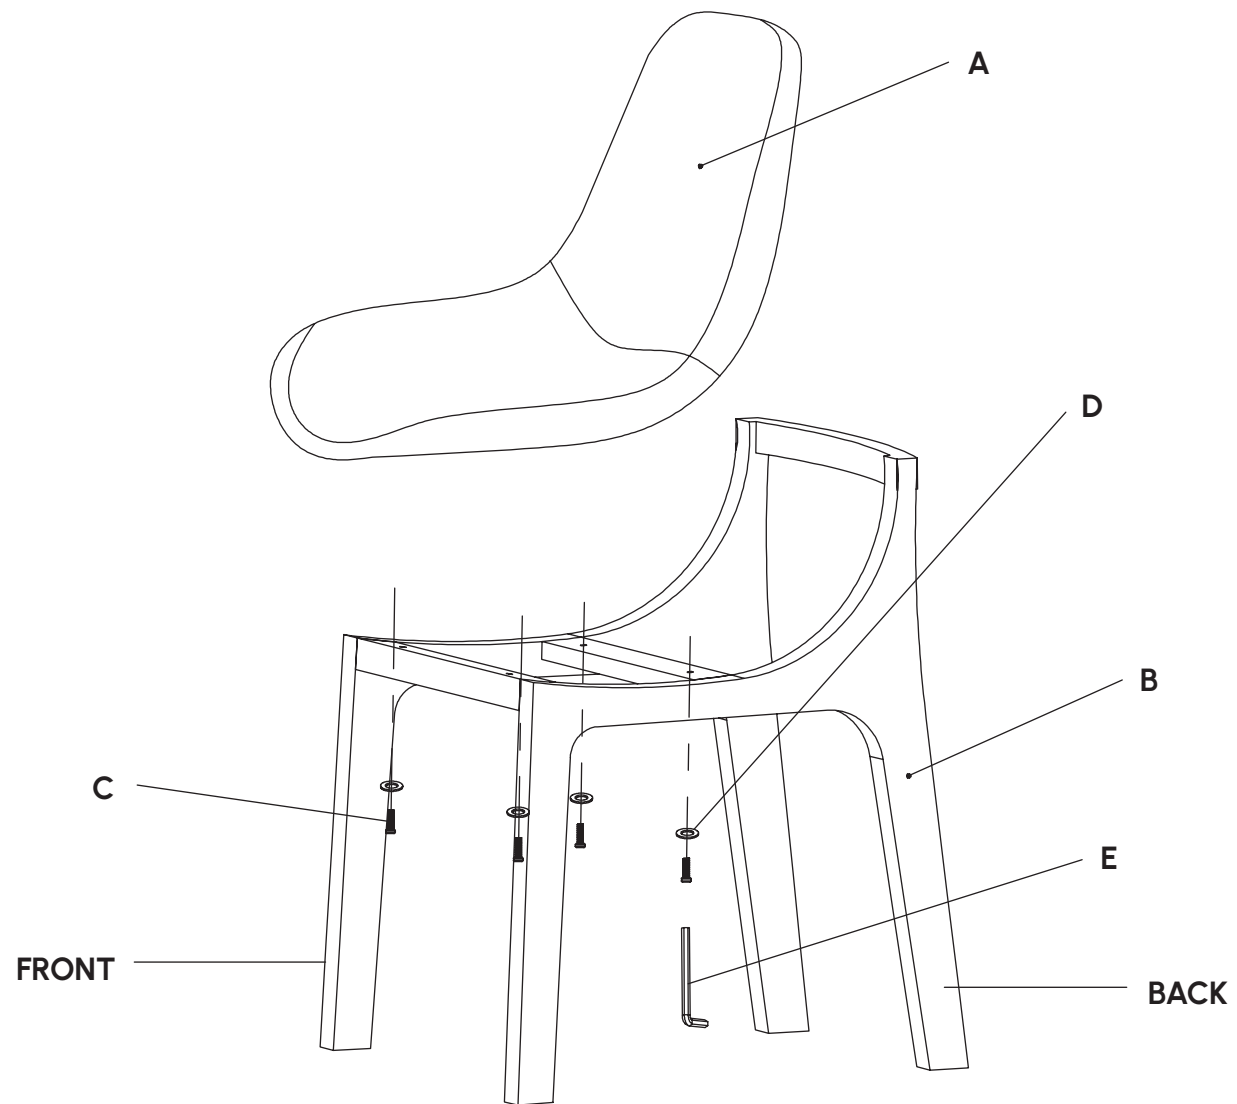

Install the rear two screws first; then the front two screws next.